

V. BFPR100B-20240816

BFPR100B OWNER'S MANUAL

WARNING, SAFETY, & MAINTENANCE

THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK, YOU MUST FOLLOW THESE RULES:

Inspect equipment before each workout. Check that all nuts, bolts, screws and pop pins are in place and fully tightened. Also, before use, check cables for sign of wear. Replace all worn parts immediately. Never use machine if any parts are damaged or missing.

FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS INJURY.

Keep clear of the cables and all moving parts when machine is in use.

Always make sure all Snap Links are closed when doing cable/pulley/strap exercises. Exercise with care. Perform your exercises at a smooth moderate pace; never perform jerky or uncoordinated movements that may cause injury.

It is recommended that you workout with a training partner.

Do not allow children or minors to play on or around this equipment.

If unsure of proper use of equipment, call your local Best Fitness distributor or the Best Fitness customer service center at 1-800-556-3113.

WARNING: Consult your physician before starting your exercise program. For your own safety, do not begin any exercise program without proper instruction.

WARNING!

Safety and Maintenance of Cables

IMPORTANT: Cables are wear items. It is your responsibility to prevent unexpected breakage.

Cable inspection should be performed daily.

Inspect all cables, the nylon coating on all cables, and the area near fitting at each end of each cable.

Replace and damaged or worn cable immediately.

Do not allow the machine to be used until damaged or worn cables are replaced. Using or allowing a machine to be used with a suspect cable can result in serious injury. See Owner's Manual for more information.

For Body-Solid Customer Service Call 1-800-556-3113

DO NOT REMOVE WARNING LABELS FROM MANUAL OR MACHINE

TABLE OF CONTENTS

•	SAFETY INSTRUCTIONS	PAGE	4
•	PREPARATION	PAGE	5
•	HARDWARE LIST	PAGE	6
•	HARDWARE ILLUSTRATION	PAGE	7
•	PART LIST/ILLUSTRATION	PAGE	8
•	ASSEMBLY INSTRUCTIONS	PAGE	10
•	EXPLODED VIEW	PAGE	18
•	CONTACT PAGE	PAGE	20

IMPORTANT SAFETY INSTRUCTIONS

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

Il est conseille de subir un examen medical complet avant d'entreprendre tout programme d'exercise. Si vous avez des etourdissements ou des faiblesses, arretez les exercices immediatement.

Antes de comenzar cualquier programma de ejercicios, deberias tener un examen fisico con su doctor.

When using exercise equipment, you should always take basic precautions, including the following:

- Read all instruction befor using the BFPR100B.
 These instructions are writeen to ensure you safety and to the protect the unit.
- Do not remove any safety labels from the machine.
- Do not allow children on or near the equipment.
- Ust the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer. Such attachments might cause injuries.
- Wear proper exercise clothing and shoes for you workout, no loose clothing.
- Keep hands, limbs, loose clothing, and long hair well out fo the way of all moving parts.
- · Use care when getting on or off the unit.
- Do not overexert yourself to work to exhaustion.
- If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician
- Never operate the unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.
- Never drop or insert objects into any opening in the equipment.
- Always check the unit before each use. Make sure that all fasteners are secure and in good working condition.
- Do not use the equipment outdoors or near water.

Personal Safety During Assembly

- Before beginning assembly, please take the time to read the instructions thoroughly.
- Read each step in the assembly instructions and follow the steps in sequence. Do no skip ahead.
 If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the BFPR100B on a solid, level surface. Locate the unit a few feet from the walls or furniture to provide easy access.

The **BFPR100B** is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Best Fitness **BF-PR100B Power Rack**.

After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call the dealer from whom you purchased the machine or call 1-800-556-3113 for the dealer nearest you.

Obtaining Service

Please use this Owner's Manual to make sure that all parts have been included in your shipment. When ordering parts, you must use the part number and description from this Owner's Manual. Use only Best Fitness replacement parts when servicing this machine. Failure to do so will void your warranty and could result in personal injury.

For information about product operation or service, go to www.bestfitness.com or contact an authorized Best Fitness dealer or a Best Fitness factory-authorized service company or contact Best Fitness customer service at one of the following:

Toll Free: 1-800-556-3113
Phone: 1-708-427-3555
Fax: 1-708-427-3556
Hours: M-F 8:30-5:00 CST
E-Mail: service@bodysolid.com

Or write to: Best Fitness

Service Department 1900 S. Des Plaines Ave. Forest Park, IL 60130 USA

Retain this Owner's Manual for future reference. If you need to order replacement parts please be prepared to provide the following information when contacting us so that we can assist you better.

- 1. Model Number
- 2. Place of Purchase
- 3. Serial Number (S/N)
- 4. Part # and Description

PREPARATION

Thank you for purchasing the BFPR100B. This machine is part of the Best Fitness line of quality strength training machines, which lets you target specific muscle groups to achieve better muscle tone and overall body conditioning. To maximize your use of the equipment please study this Owner's Manual thoroughly.

Required Tools

The basic tools that you must obtain before assembling the BFPR100B include but are not limited to:

- Metric Allen Key Set
- Standard Allen Key Set
- Standard Wrench Set
- Metric Wrench Set
- Adjustable Wrench
- Screwdriver (standard and/or phillips)

Installation Requirements

Follow these installation requirements when assembling the BFPR100B:

Set up the BFPR100B on a solid, flat surface. A smooth, flat surface under the machine helps keep it level. A level machine has fewer malfunctions.

Provide ample space around the machine. Open space around the machine allows for easier access.

Insert all bolts in the same direction. For aesthetic purposes, insert all bolts in the same direction unless specified (in text or illustrations) to do otherwise.

Leave room for adjustments. Tighten fasteners such as bolts, nuts, and screws so the unit is stable, but leave room for adjustments. Do not fully tighten fasteners until instructed in the assembly steps to do so.

Fill out and mail the warranty card.

Assembly Tips

Read all "Notes" on each page before beginning each

While you may be able to assemble the BFPR100B using the illustrations only, important safety notes and other tips are included in the text.

Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.


NOTE: With so many assembled parts, proper

alignment and adjustment is critical. While tightening the nuts and bolts, be sure to leave room for adjustments.

NOTE: The bottles that are marked "Poison" is your

touch up paint. Keep away from children.

CAUTION: Obtain assistance! If you feel like you can't assemble the **BFPR100B** by yourself then do not attempt to do so as this could result in injury. Review the installation requirements before proceeding with the following steps.

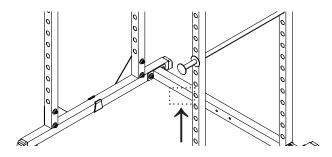

Your S/N# can be found here

Best Fitness continually seeks ways to improve the performance, specifications and product manuals in order to ensure that only superior products are released from our factories. Please take the time to carefully read through this manual thoroughly. Instructions contained in this document are not intended to cover all details or variations possible with Best Fitness equipment, or to cover every contingency that may be met in conjunction with installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this manual, the matter should be directed to your local Best Fitness representative, or the Service Department at Body-Solid Inc. in Forest Park, Illinois.

> Any Questions? Call (800) 556-3113


PFPR100B- HARDWARE LIST

PART#	SIZE	DESCRIPTION	QUANTITY	
1	M10X70mm	HEX HEAD BOLT	12 PCS.	
2	M10X75mm	HEX HEAD BOLT	8 PCS.	
3	ø11Xø30X2.5mm	FLAT WASHER	40 PCS.	
4	M10	NYLON LOCK NUT	20 PCS .	

Part numbers are required when ordering parts.


HARDWARE ILLUSTRATION

QTY. 12 Part #1 **HEX HEAD BOLT M10X70mm HEX HEAD BOLT M10X75mm QTY. 8** Part #2 FLAT WASHER ø11Xø30X2.5mm **QTY. 40** Part #3 **NYLON LOCK NUT M10 QTY. 20 Part #4**

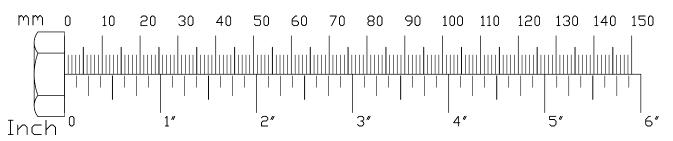


PART LIST/ILLUSTRATION


PART A - FRAME A, 1 PCS

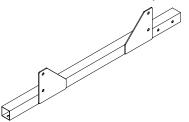


PART B - FRAME B, 1 PCS




PART C - FRAME C, 2 PCS

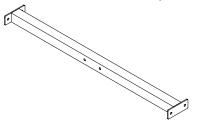

PART D - FRAME D, 4 PCS




PART E - FRAME E, 2 PCS

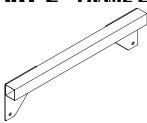





PART G - LIFT OFF, 2 PCS

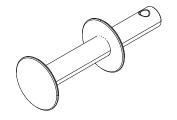

PART H - SAFETY CATCH, 2 PCS

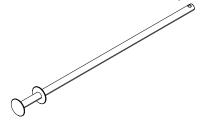


PART #5 - FOOT CAP, 4 PCS



PART #6 - CLIP-ON SPACER, 2 PCS




PART #7 - END CAP, 4 PCS



PART F - CHIN UP BAR, 1 PCS PART #8 - SAFETY PIN, 4 PCS



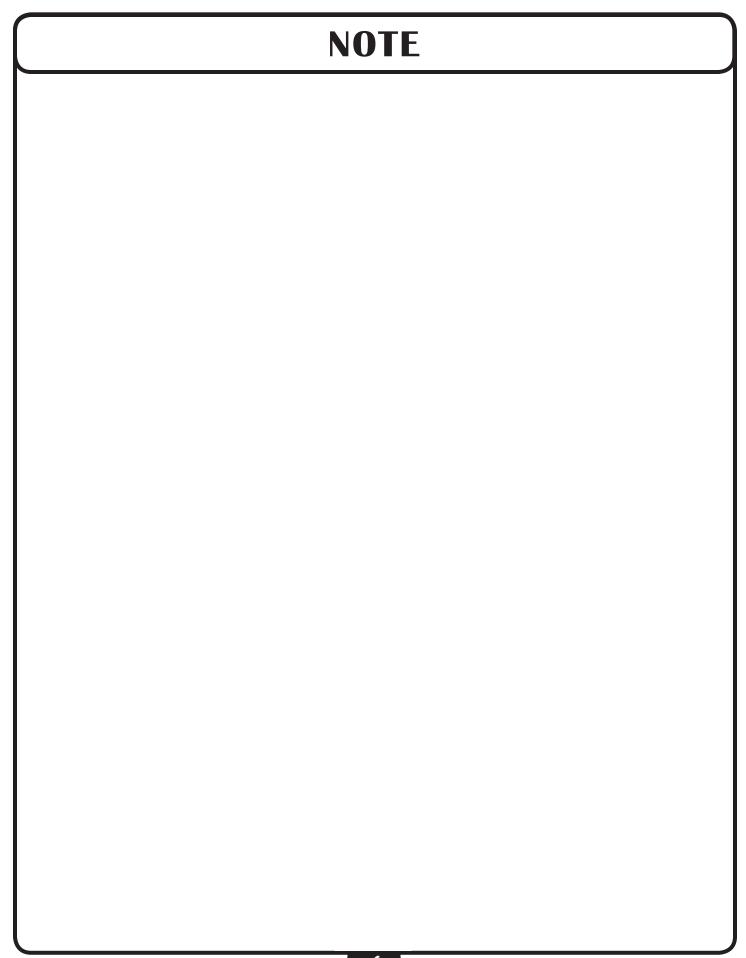


Be careful to assemble all components in the sequence they are presented.


NOTE:

Finger tighten all hardware in this step. DO NOT wrench tighten until the last step. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- 1A. Install four Foot Caps (#5) in Frame A (A) and Frame B (B).
- 1B. Install two Clip-On Spacers (#6) on Frame A (A) and Frame B (B).
- 1C. Attach Frame A (A) and Frame B (B) to Frame C (C) using:
 - 4 (#1) M10X70mm Hex Head Bolt
 - 8 (#3) ø11Xø30X2.5mm Flat Washer
 - 4 (#4) M10 Nylon Lock Nut

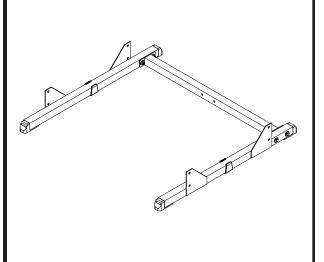



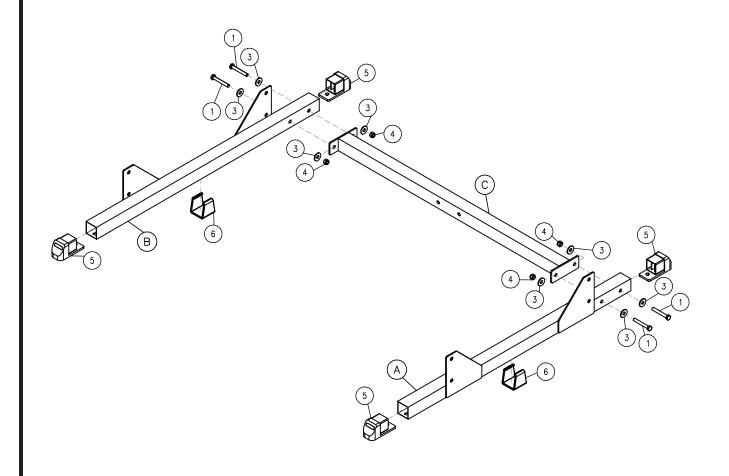

Be careful to assemble all components in the sequence they are presented.

NOTE:


Finger tighten all hardware in this step. DO NOT wrench tighten until the last step. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

2A. Attach two Frame D (D) to Frame A (A) using:

- 4 (#1) M10X70mm Hex Head Bolt
- 8 (#3) ø11Xø30X2.5mm Flat Washer
- 4 (#4) M10 Nylon Lock Nut

2B. Attach two Frame D (D) to Frame B (B) using:

- 4 (#1) M10X70mm Hex Head Bolt
- 8 (#3) ø11Xø30X2.5mm Flat Washer
- 4 (#4) M10 Nylon Lock Nut

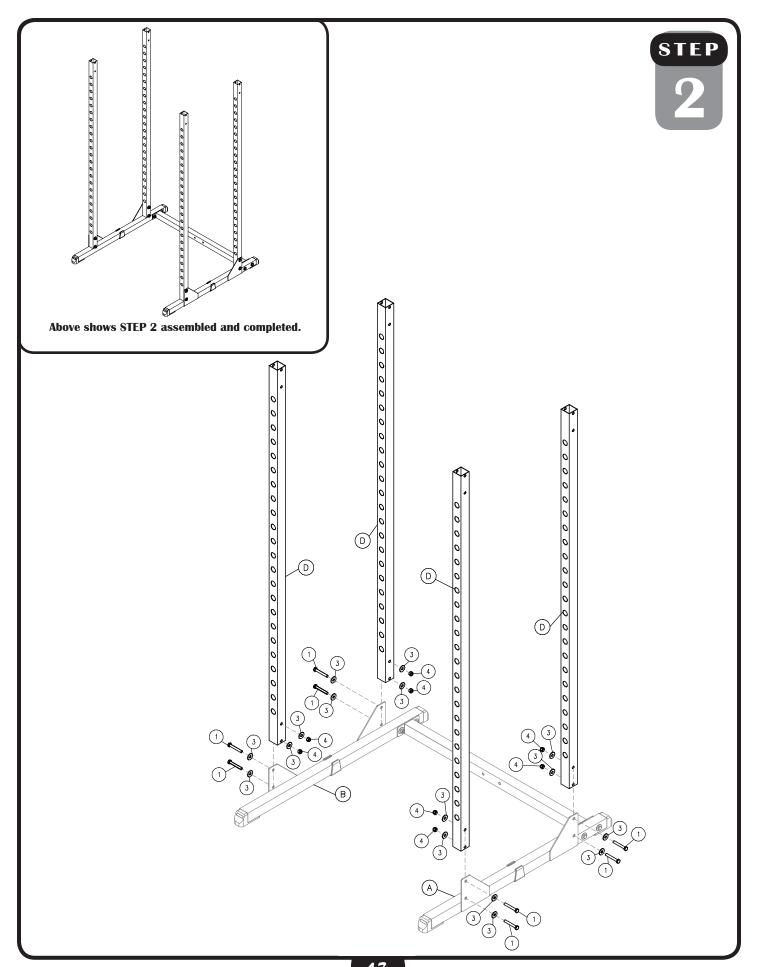


Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 3C. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- 3A. Install four End Caps (#7) in two Frame E (E).
- 3B. Attach one ends of two Frame E (E) and Frame C (C) to Frame D (D) using:
 - 4 (#2) M10X75mm Hex Head Bolt
 - 8 (#3) ø11Xø30X2.5mm Flat Washer
 - 4 (#4) M10 Nylon Lock Nut
- 3C. Attach another ends of Frame E (E) and Chin Up Bar (F) to Frame D (D) using:
 - 4 (#2) M10X75mm Hex Head Bolt
 - 8 (#3) ø11Xø30X2.5mm Flat Washer
 - 4 (#4) M10 Nylon Lock Nut

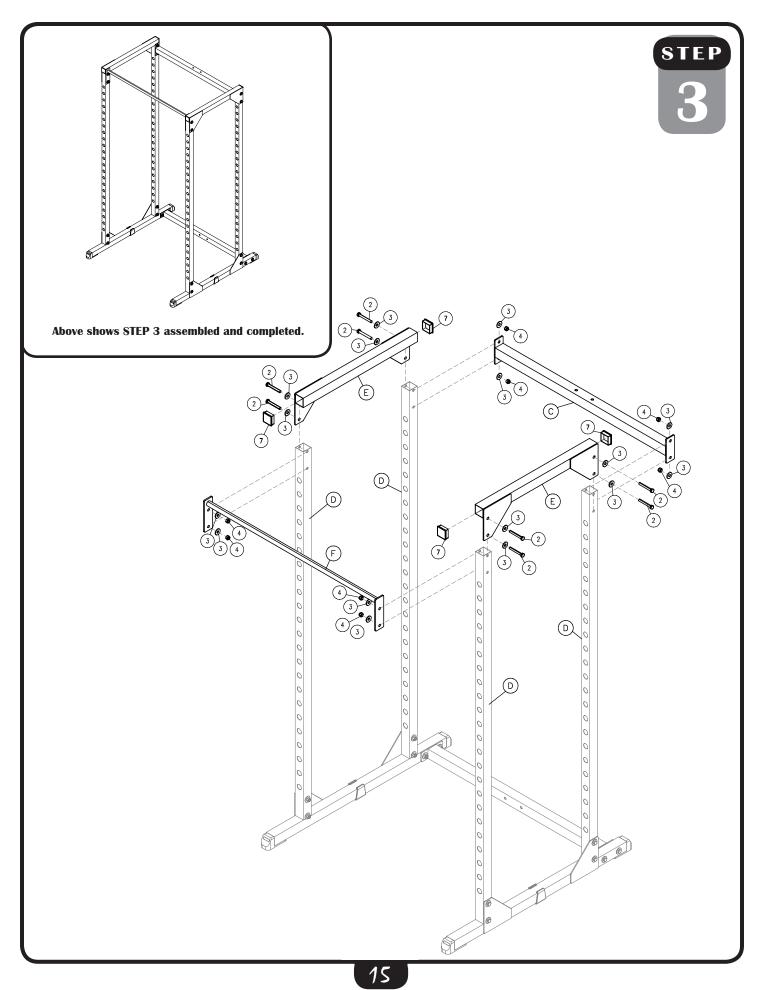




Be careful to assemble all components in the sequence they are presented.


- 4A. Insert Safety Catches (H) and Lift Offs (G) into desired positions.
- 4B. Insert the Safety Pins (#8) at the ends of the Safety Catches (H) and Lift Offs (G).

NOTE:

Please make sure the Safety Pins (#8) are fully engaged after Safety Catches (H) and Lift Offs (G) are inserted into the Frames.

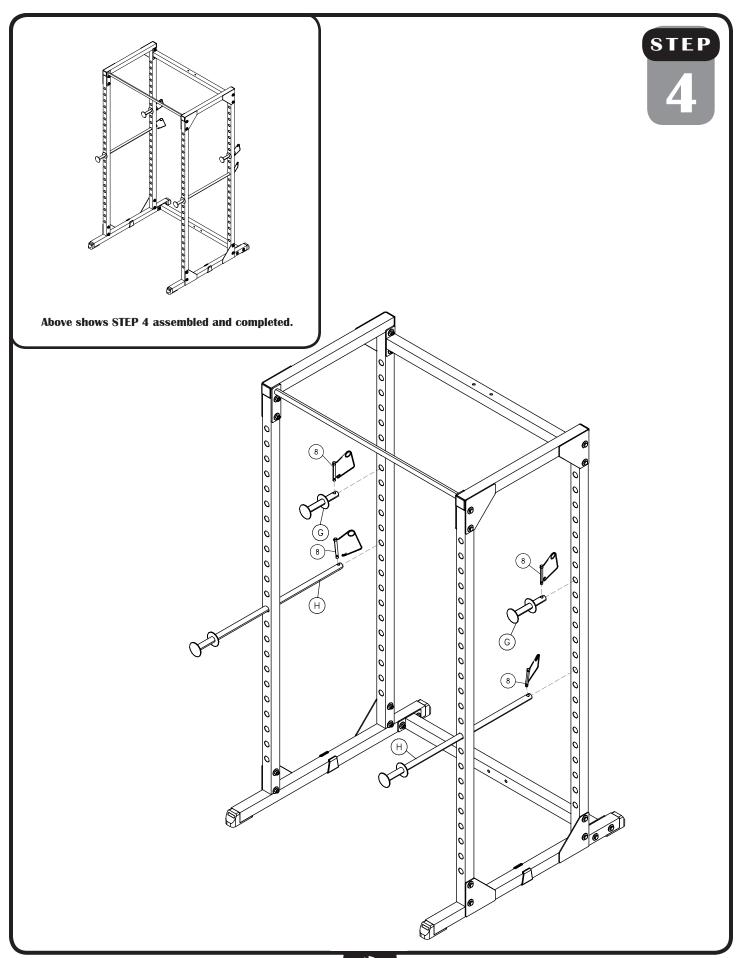

EXPLODED VIEW DIAGRAM

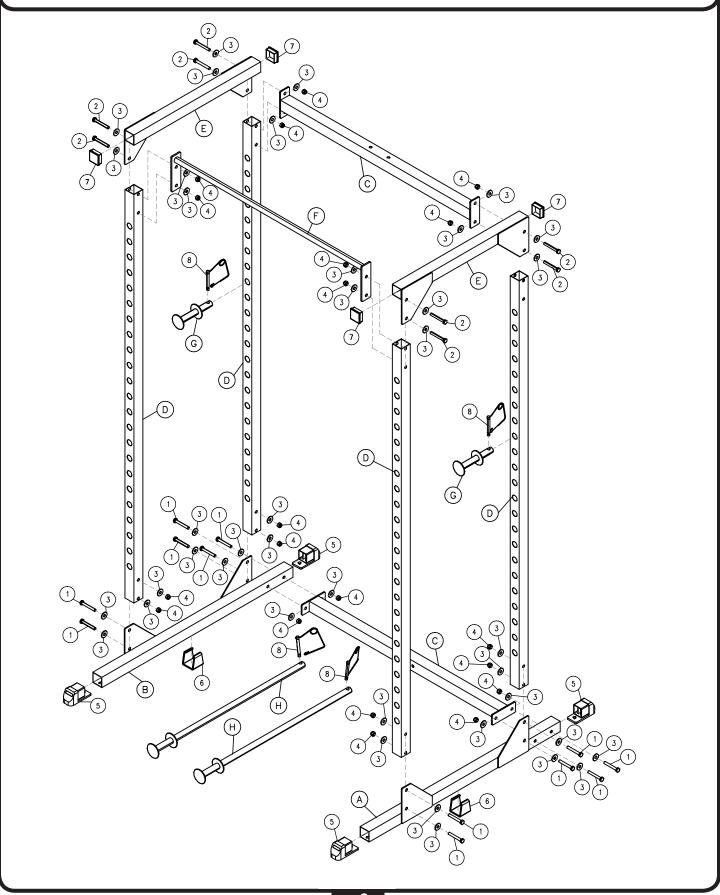



BFPR100B

PLEASE WRITE YOUR SERIAL NUMBER IN THE BOXES BELOW

S/N # 008274 -]-	-
-----------------------	--	----	---

1900 S. Des Plaines Ave. Forest Park, II 60130 1 (800) 556-3113

Hours: M-F 8:30 - 5:00 CST

