


# Body-Solid®

Built for Life

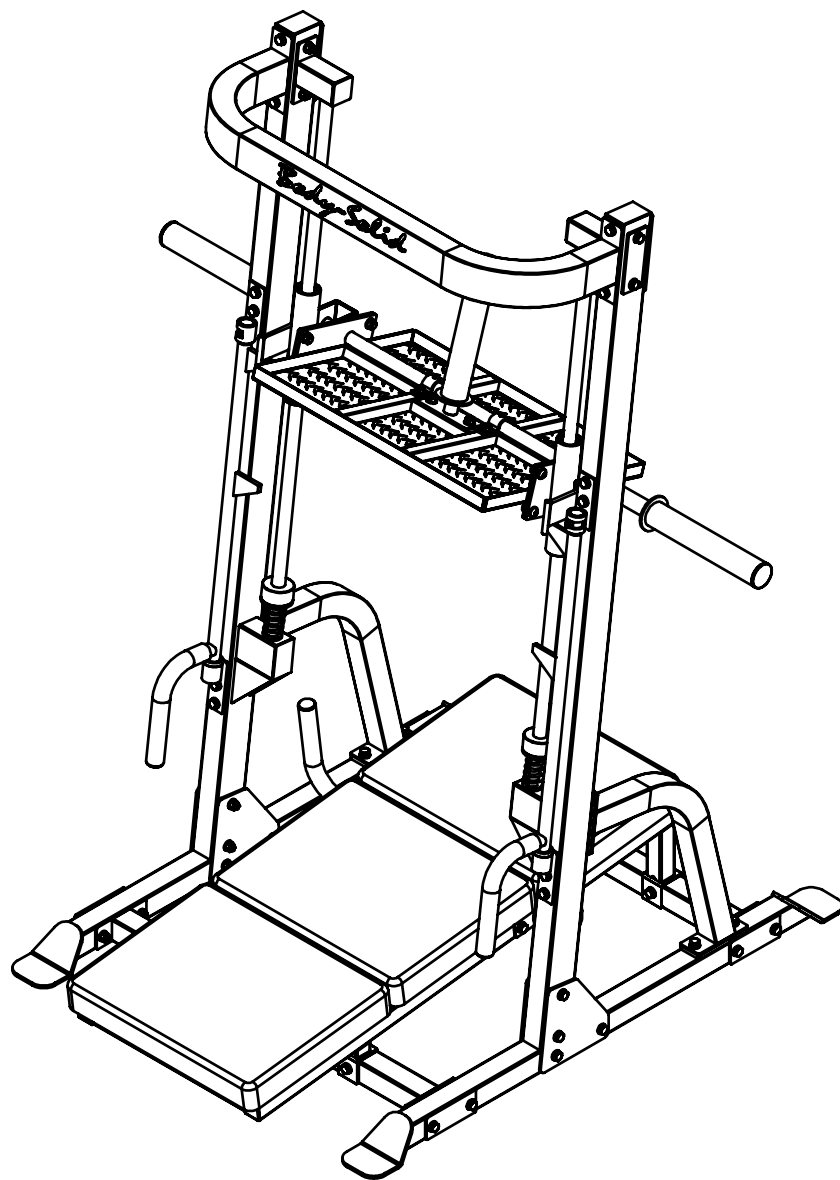

## GVLP

Assembly & Instructions  
**OWNER'S & MANUAL**

V. GVLP-20240529

# Warning, Safety & Maintenance

Be sure that all users carefully read and understand all warning, safety and maintenance labels on the machine before each use. Failure to do so may result in death or serious injury.

It is imperative that you retain this Owner's Manual and be sure all warning labels are legible and intact. Replacement Owner's Manuals and warning labels are available from your local Body-Solid dealer.

If you have any questions about the operation, set up or maintenance of this machine please call our customer service department at 1 (800) 556-3113.

## THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK, YOU MUST FOLLOW THESE RULES:

1. Inspect equipment before each workout. Check that all nuts, bolts, screws and pop pins are in place and fully tightened. Also, before use, check cables for signs of wear. Replace all worn parts immediately. Never use machine if any parts are damaged or missing.
2. Keep clear of the cables and all moving parts when the machine is in use.
3. Always make sure all Snap Links are closed when doing any cable/pulley/strap exercises.
4. Exercise with care. Perform your exercises at a smooth moderate pace; never perform jerky or uncoordinated movements that may cause injury.
5. It is recommended that you should workout with a training partner.
6. Do not allow children or minors to play on or around this equipment.
7. If unsure of proper use of equipment, call your local Body-Solid distributor or the Body-Solid customer service department at 1-800-556-3113.
8. **WARNING:** Consult your physician before starting your exercise program. For your own safety, do not begin any exercise program without proper instruction. RAL8-6-03 WC-54

## WARNING

### Safety and Maintenance of Cables

**IMPORTANT:** Cables are wear items. It is your responsibility to prevent unexpected breakage. **Cable inspection should be performed daily.** Inspect all cables, the nylon coating on all cables, and the area near the fitting at each end of each cable. **Replace any damaged or worn cable immediately.** Do not allow the machine to be used until damaged or worn cables are replaced. Using or allowing a machine to be used with a suspect cable can result in serious injury. See Owner's Manual for more information.

For Body-Solid Customer Service  
Call 1-800-556-3113

## MAINTENANCE SCHEDULE

Check the function and integrity of the following components. As noted, inspect equipment before each workout. Replace all damaged, broken or worn components immediately.

|                                                             | DAILY | WEEKLY |
|-------------------------------------------------------------|-------|--------|
| Cables: Check tension, end fittings, and coating            | ✓     |        |
| Check that locking nut at weight stack is tight             |       | ✓      |
| Upholstery: Wipe down and dry                               | ✓     |        |
| Clean and condition                                         |       | ✓      |
| Frame: Wipe down and dry                                    | ✓     |        |
| Polish / Wax                                                |       | ✓      |
| Chrome: Wipe down and dry                                   | ✓     |        |
| Polish / Lubricate                                          |       | ✓      |
| Nuts / Bolts / Fasteners: Tighten and / or adjust as needed |       | ✓      |
| Guide Rods: Lubricate and clean                             |       | ✓      |
| Linear Rods: Lubricate and clean                            |       | ✓      |
| Seat Sleeves: Lubricate and clean                           |       | ✓      |
| Adjustments / Locking Pins / Tightening Knobs               |       | ✓      |
| Weight Stack Pins                                           |       | ✓      |
| Warning Instruction Labels                                  |       | ✓      |
| Springs / Pop Pins                                          | ✓     |        |
| Anti Skid Surfaces                                          |       | ✓      |
| Hand Grips / Rollers                                        |       | ✓      |

For Body-Solid Customer Service  
Call 1-800-556-3113  
#MSSTKR0803

## Table of Contents

- SAFETY INSTRUCTIONS..... PAGE 4
- PREPARATION..... PAGE 5
- PART / HARDWARE LIST..... PAGE 6
- HARDWARE ILLUSTRATION..... PAGE 8
- ASSEMBLY INSTRUCTIONS.....PAGE 12
- EXPLODED VIEW..... PAGE 23
- CONTACT PAGE..... PAGE 24

# Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

*Il est conseillé de subir un examen médical complet avant d'entreprendre tout programme d'exercice.  
Si vous avez des étourdissements ou des faiblesses, arrêtez les exercices immédiatement.*

*Antes de comenzar cualquier programa de ejercicios, deberías tener un examen físico con su doctor.*

## **When using exercise equipment, you should always take basic precautions, including the following:**

- Read all instructions before using the **GVLP**. These instructions are written to ensure your safety and to protect the unit.
- **Do not remove any safety labels from the machine.**
- Do not allow children on or near the equipment.
- Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer. Such attachments might cause injuries.
- Wear proper exercise clothing and shoes for your workout, no loose clothing.
- Keep hands, limbs, loose clothing, and long hair well out of the way of all moving parts.
- Use care when getting on or off the unit.
- Do not overexert yourself or work to exhaustion.
- If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- Never operate unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.
- Never drop or insert objects into any opening in the equipment.
- Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- Do not use the equipment outdoors or near water.

## **Personal Safety During Assembly**

- Before beginning assembly, please take the time to read the instructions thoroughly.
- Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the **GVLP** on a solid, level surface. Locate the unit a few feet from the walls or furniture to provide easy access.

The **GVLP** is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Body-Solid **Vertical Leg Press**.

After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call the dealer from whom you purchased the machine or call **1-800-556-3113** for the dealer nearest you.

## **Obtaining Service**

Please use this Owner's Manual to make sure that all parts have been included in your shipment. When ordering parts, you must use the part number and description from this Owner's Manual. Use only Body-Solid replacement parts when servicing this machine. Failure to do so will void your warranty and could result in personal injury.

For information about product operation or service, check out the official Body-Solid website at [www.bodysolid.com](http://www.bodysolid.com) or contact an authorized Body-Solid dealer or a Body-Solid factory-authorized service company or contact Body-Solid customer service at one of the following:

**Toll Free: 1-800-556-3113**  
**Phone: 1-708-427-3555**  
**Fax: 1-708-427-3556**  
**Hours: M-F 8:30-5:00 CST**  
**E-Mail: [service@bodysolid.com](mailto:service@bodysolid.com)**

**Or write to: Body-Solid, Inc.**  
**Service Department**  
**1900 S. Des Plaines Ave.**  
**Forest Park, IL 60130 USA**

**Retain this Owner's Manual for future reference. If you need to order replacement parts please be prepared to provide the following information when contacting us so that we can assist you better.**

- 1. Model Number**
- 2. Place of Purchase**
- 3. Serial Number (S/N)**
- 4. Part # and Description**

# Preparation

Thank you for purchasing the **GVLP**. This Product is part of the Body-Solid line of quality strength training machines, which lets you target specific muscle groups to achieve better muscle tone and overall body conditioning. To maximize your use of the equipment please study this Owner's Manual thoroughly.

## **Required Tools**

The basic tools that you must obtain before assembling the **GVLP** include but are not limited to:

- Standard Wrench Set
- Metric Wrench Set
- Adjustable Wrench

## **Installation Requirements**

Follow these installation requirements when assembling the **GVLP**:

Set up the **GVLP** on a solid, flat surface. A smooth, flat-surface under the machine helps keep it level. A level machine has fewer malfunctions.

Provide ample space around the machine. Open space around the machine allows for easier access.

Insert all bolts in the same direction. For aesthetic purposes, insert all bolts in the same direction unless specified (in text or illustrations) to do otherwise.

Leave room for adjustments. Tighten fasteners such as bolts, nuts, and screws so the unit is stable, but leave room for adjustments. Do not fully tighten fasteners until instructed in the assembly steps to do so.

**Fill out and mail the warranty card.**

## **Assembly Tips**


Read all "Notes" on each page before beginning each step.

While you may be able to assemble the **GVLP** using the illustrations only, important safety notes and other tips are included in the text.

Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.

**NOTE:** With so many assembled parts, proper alignment and adjustment is critical. While tightening the nuts and bolts, be sure to leave room for adjustments.

**CAUTION:** Obtain assistance! If you feel like you can't assemble the **GVLP** by yourself then do not attempt to do so as this could result in injury. Review the installation requirements before proceeding with the following steps.

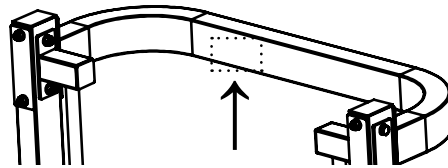

Your S/N# can  
be found here

Body-Solid continually seeks ways to improve the performance, specifications and product manuals in order to ensure that only superior products are released from our factories. Please take the time to carefully read through this manual thoroughly. Instructions contained in this document are not intended to cover all details or variations possible with Body-Solid equipment, or to cover every contingency that may be met in conjunction with installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this manual, the matter should be directed to your local Body-Solid representative, or the Service Department at Body-Solid Inc. in Forest Park, Illinois.

## G V L P P a r t s   &   H a r d w a r e   L i s t

| <b>Part#</b> | <b>Qty</b> | <b>Description</b>             |
|--------------|------------|--------------------------------|
| A            | 2          | SIDE BASE FRAME                |
| B            | 2          | CENTER BASE FRAME              |
| C            | 6          | STEEL PLATE, 130x50mm          |
| D            | 4          | STEEL PLATE                    |
| E            | 2          | STEEL PLATE, 165x50mm          |
| F            | 1          | BACKREST FRAME                 |
| G            | 2          | HANDLE                         |
| H            | 2          | CHROME GUIDE ROD               |
| J            | 1          | LEFT UPRIGHT                   |
| K            | 1          | RIGHT UPRIGHT                  |
| L            | 2          | UPRIGHT BRACE                  |
| M            | 1          | RIGHT CARRIAGE                 |
| N            | 1          | LEFT CARRIAGE                  |
| P            | 1          | FOOT PLATE                     |
| Q            | 1          | CENTER WEIGHT HORN             |
| R            | 3          | WEIGHT HORN TUBE               |
| S            | 1          | WEIGHT ROD                     |
| T            | 2          | GUIDE ROD FRAME                |
| U            | 1          | CENTER TOP FRAME               |
| V            | 1          | LEFT BRACKET                   |
| W            | 1          | RIGHT BRACKET                  |
| X            | 1          | LEFT SAFETY HANDLE             |
| Y            | 1          | RIGHT SAFETY HANDLE            |
| Z            | 2          | LOWER BRACKET                  |
| 1            | 4          | M10x100mm HEX HEAD BOLT        |
| 2            | 8          | M10x95mm HEX HEAD BOLT         |
| 3            | 20         | M10x75mm HEX HEAD BOLT         |
| 4            | 4          | M10x70mm HEX HEAD BOLT         |
| 5            | 4          | M10x60mm HEX HEAD BOLT         |
| 6            | 2          | M10x45mm FLAT HEAD CAP SCREW   |
| 7            | 13         | M10x25mm BUTTON HEAD CAP SCREW |
| 8            | 8          | M10x20mm HEX HEAD BOLT         |
| 9            | 12         | M8x55mm HEX HEAD BOLT          |
| 10           | 4          | M8x45mm FLAT HEAD CAP SCREW    |



## **G V L P   P a r t s   &   H a r d w a r e   L i s t**

| <b>Part#</b> | <b>Qty</b> | <b>Description</b>                   |
|--------------|------------|--------------------------------------|
| 11           | 2          | M8x20mm SOCKET HEAD CAP SCREW        |
| 12           | 2          | M6x4mm SET SCREW                     |
| 13           | 96         | M10 WASHER                           |
| 14           | 13         | M10 LOCK WASHER                      |
| 15           | 15         | M10 LARGE WASHER                     |
| 16           | 16         | M8 WASHER                            |
| 17           | 12         | M8 LOCK WASHER                       |
| 18           | 50         | M10 NYLON LOCK NUT                   |
| 19           | 4          | M8 NYLON LOCK NUT                    |
| 20           | 2          | U BRACKET                            |
| 21           | 4          | HAND GRIP, 280mm                     |
| 22           | 4          | PLASTIC ROUND END CAP, ø31mm         |
| 23           | 2          | SPRING, O.D.ø37xø5x78mm              |
| 24           | 2          | WASHER, ø60xø26x5mm                  |
| 25           | 2          | RUBBER BUMPER, ø60xø25x30mm          |
| 26           | 4          | RETAINING RING, OD ø37mm             |
| 27           | 4          | LINEAR BEARING, ø40xø25x58mm, LM25UU |
| 28           | 3          | PLASTIC ROUND END CAP, ø31mm         |
| 30           | 3          | BACKREST PAD                         |
| 31           | 4          | SQUARE END CAP, 38x38mm              |

# GVLP Hardware Illustration



Part #1      HEX HEAD BOLT M10x100mm

QTY. 4

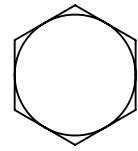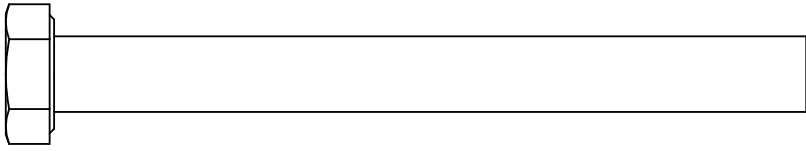



Part #2      HEX HEAD BOLT M10x95mm

QTY. 8

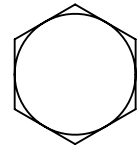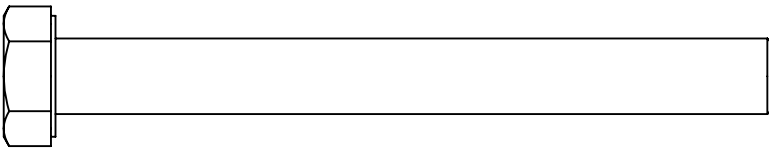



Part #3      HEX HEAD BOLT M10x75mm

QTY. 20

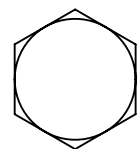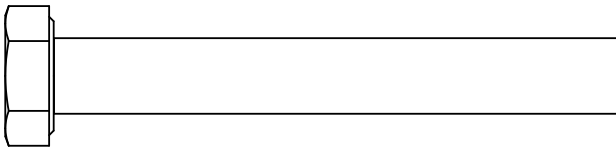




Part #4      HEX HEAD BOLT M10x70mm

QTY. 4

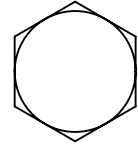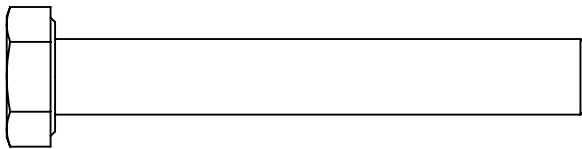

Part #5      HEX HEAD BOLT M10x60mm

QTY. 4

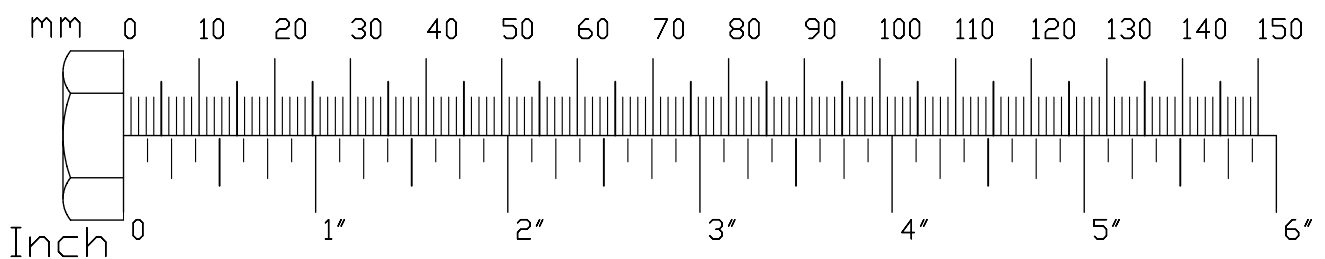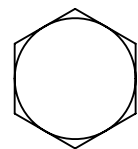
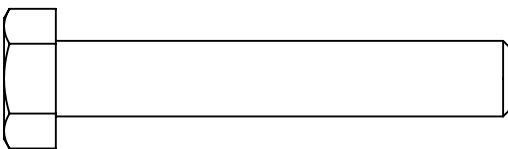


# GVLP Hardware Illustration

Part #6

FLAT HEAD CAP SCREW M10x45mm



QTY. 2

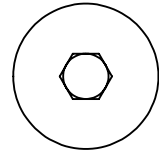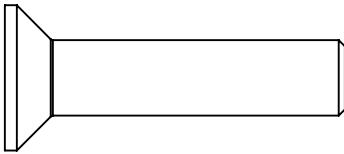

Part #7

BUTTON HEAD CAP SCREW M10x25mm



QTY. 13

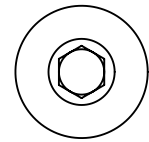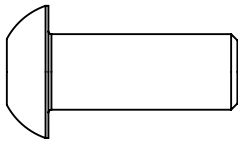

Part #8

HEX HEAD BOLT M10x20mm



QTY. 8

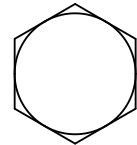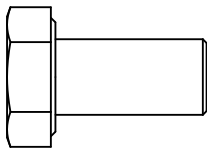

Part #9

HEX HEAD BOLT M8x55mm




QTY. 12



Part #10

FLAT HEAD CAP SCREW Mx45mm

QTY. 4

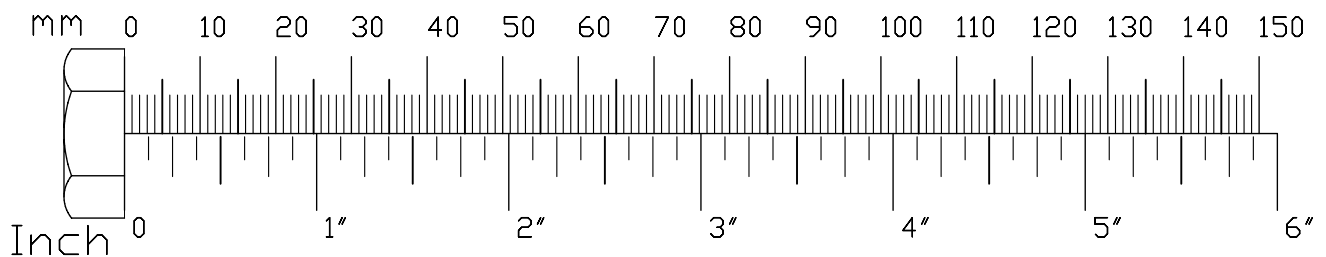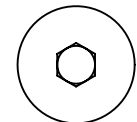
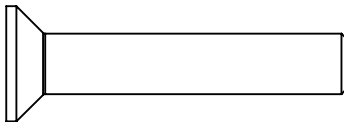


# GVLP Hardware Illustration

Part #11

SOCKET HEAD CAP SCREW M8x20mm

QTY. 2



Part #12

SET SCREW M6x4mm


QTY. 2



Part #13

WASHER M10



QTY. 96

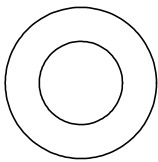

Part #14

LOCK WASHER M10



QTY. 13

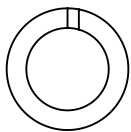

Part #15

LARGE WASHER M10

QTY. 15

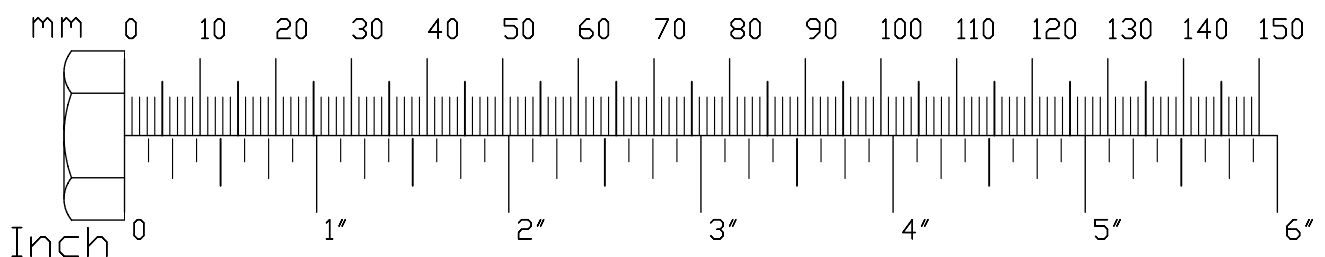
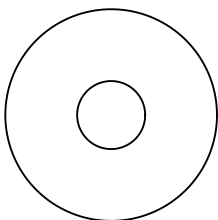


# GVLP Hardware Illustration

Part #16

WASHER M8


QTY. 16

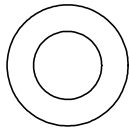

Part #17

LOCK WASHER M8



QTY. 12



Part #18

NYLON LOCK NUT M10




QTY. 50

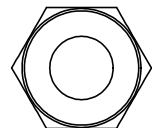

Part #19

NYLON LOCK NUT M8

QTY. 4

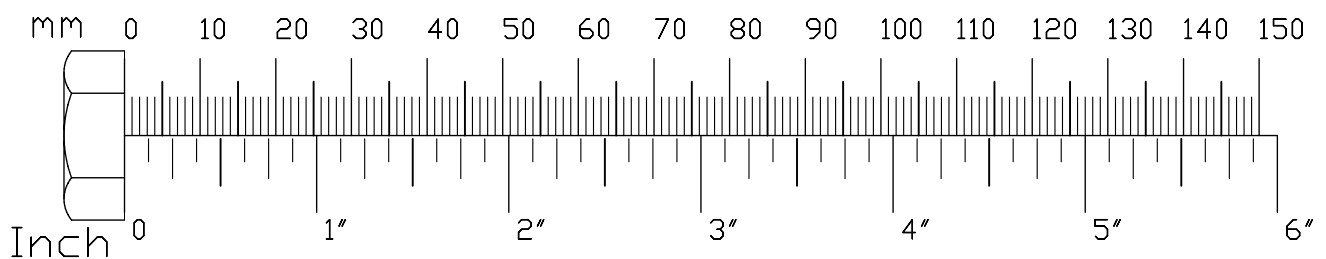

## STEP


# 1

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Finger tighten all hardware in this step. DO NOT wrench tighten until instructed. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tightened to fully go on.**

- 1A.** Attach Side Base Frames **(A)** to Center Base Frames **(B)** using:
- 8 - (#3) M10x75mm Hex Head Bolt**
  - 16 - (#13) M10 Washer**
  - 8 - (#18) M10 Nylon Lock Nut**
  - 4 - (C) Steel Plate**

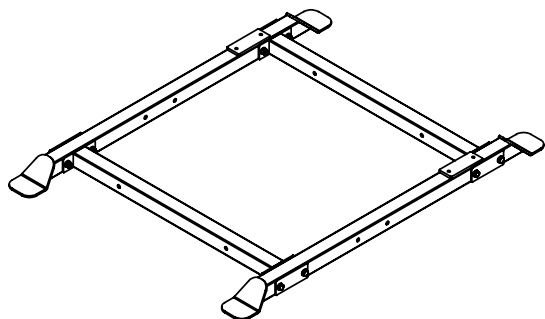

Above shows Step 1 assembled and completed.

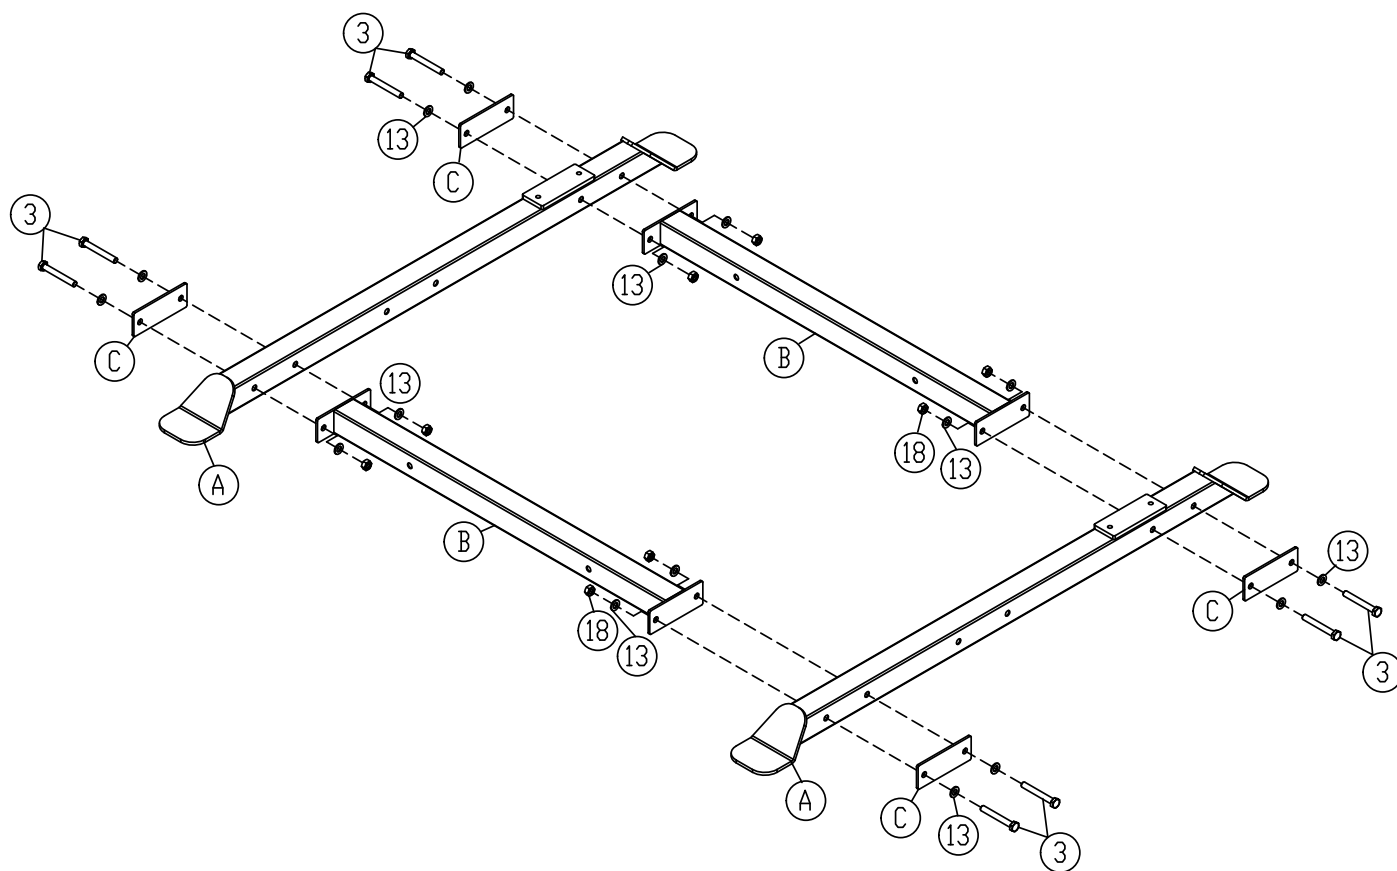


**STEP****2**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Finger tighten all hardware in this step. DO NOT wrench tighten until instructed. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tightened to fully go on.**

- 2A.** Attach Left & Right Uprights (**J & K**) to Side Base Frames (**A**) using:  
8 - (#3) M10x75mm Hex Head Bolt  
16 - (#13) M10 Washer  
8 - (#18) M10 Nylon Lock Nut  
4 - (D) Steel Plate
- 2B.** Attach Center Top Frame (**U**) to Left & Right Uprights (**J & K**) using:  
4 - (#1) M10x100mm Hex Head Bolt  
8 - (#13) M10 Washer  
4 - (#18) M10 Nylon Lock Nut  
2 - (E) Steel Plate, 160x50mm
- 2C.** Attach Upright Braces (**L**) to Left & Right Uprights (**J & K**) using:  
8 - (#8) M10x20mm Hex Head Bolt  
8 - (#13) M10 Washer  
8 - (#14) M10 Lock Washer

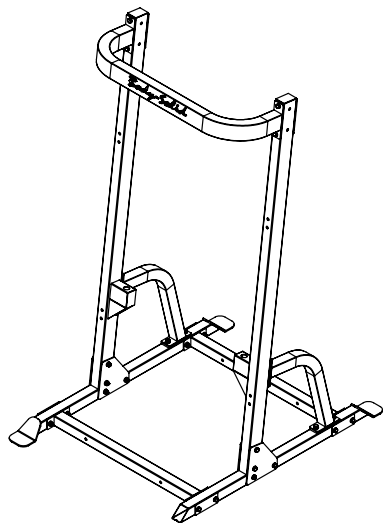

Above shows Step 2 assembled and completed.

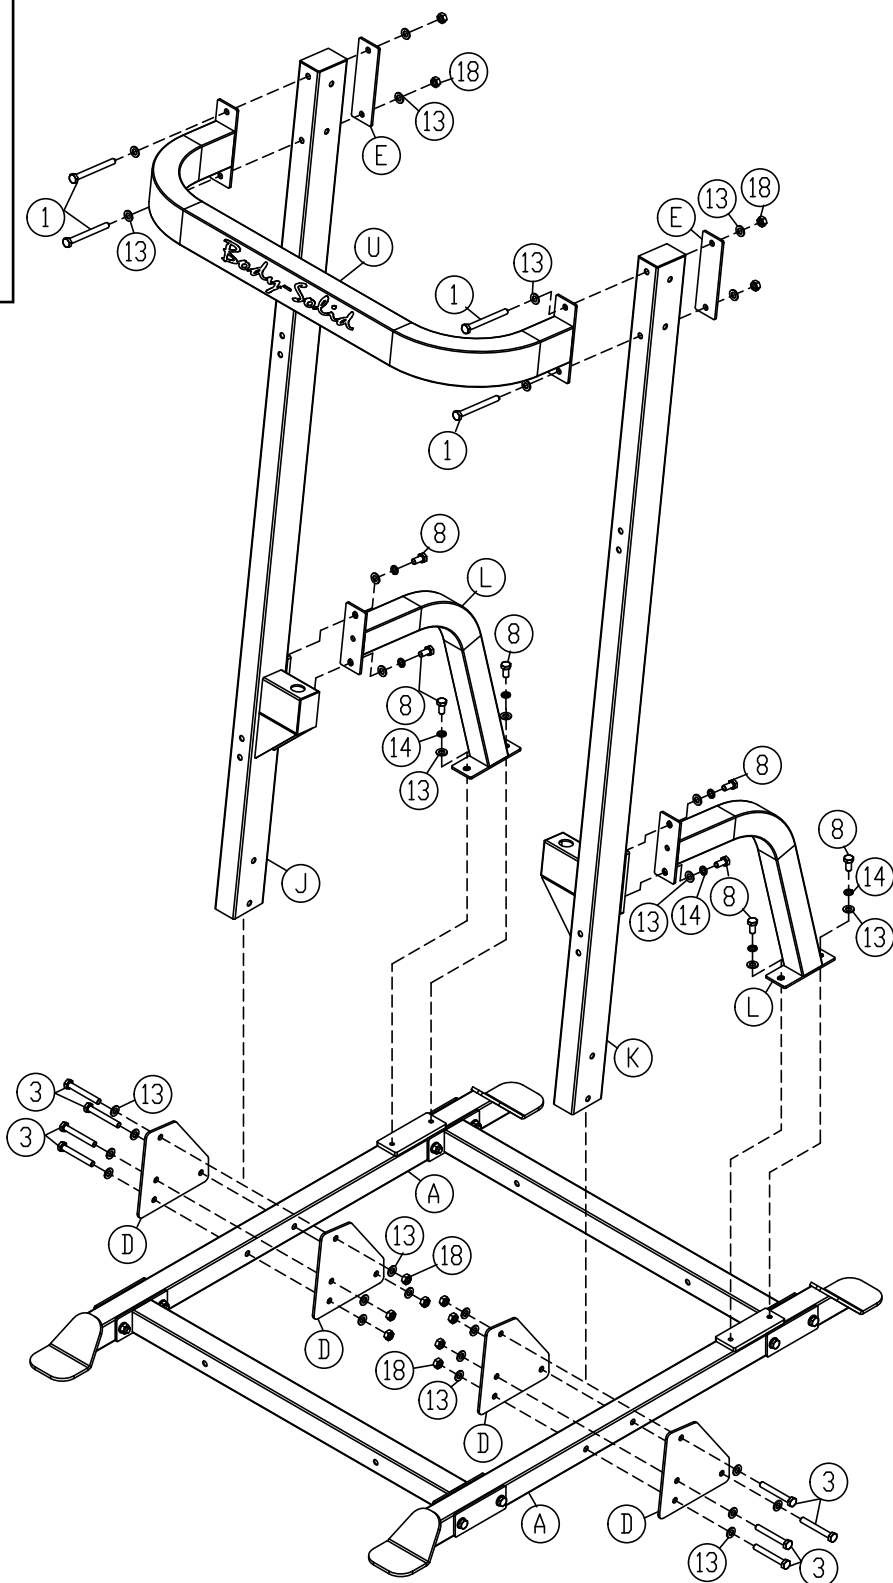

**STEP****3**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Wrench tighten ALL hardware at the end of STEP 3G. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.**


- 3A.** Attach Guide Rods (**H**) to Uprights (**J & K**) using:
  - 2 - (#7) M10x25mm Button Head Cap Screw**
  - 2 - (#13) M10 Washer**
  - 2 - (#14) M10 Lock Washer**
- 3B.** Insert Springs (**#23**), Washers (**#24**), Rubber Bumpers (**#25**) in sequence as shown in the Step #3 Drawing onto Guide Rods (**H**).
- 3C.** Install Left & Right Carriages (**N & M**) onto Guide Rods (**H**).
- 3D.** Attach Guide Rods (**H**) to Guide Rod Frames (**T**) using:
  - 4 - (#3) M10x75mm Hex Head Bolt**
  - 8 - (#13) M10 Washer**
  - 4 - (#18) M10 Nylon Lock Nut**
  - 2 - (C) Steel Plate**
- 3E.** Attach Foot Plate (**P**) to Left & Right Carriages (**N & M**) using:
  - 8 - (#7) M10x25mm Button Head Cap Screw**
  - 16 - (#13) M10 Washer**
  - 8 - (#18) M10 Nylon Lock Nut**
- 3F.** Insert Weight Horn Rod (**S**) into Foot Plate (**P**), Left & Right Carriage (**N & M**).
- 3G.** Attach Weight Horn Rod (**S**) to Foot Plate (**P**) using:
  - 4 - (#10) M8x45mm Flat Head Cap Screw**
  - 4 - (#16) M8 Washer**
  - 4 - (#19) M8 Nylon Lock Nut**
  - 2 - (#12) M6x4mm Set Screw**
  - 2 - (#20) U Bracket**

**IMPORTANT NOTE:**

Please use measuring tape to make sure the Weight horn Rod (**S**) is place in the center when the Set Screws (**#12**) are tightened.

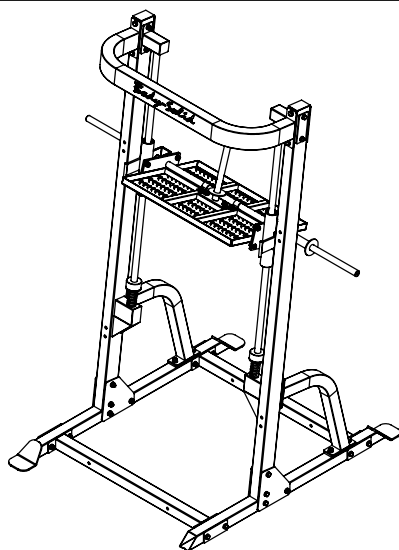

Above shows Step 3 assembled and completed.

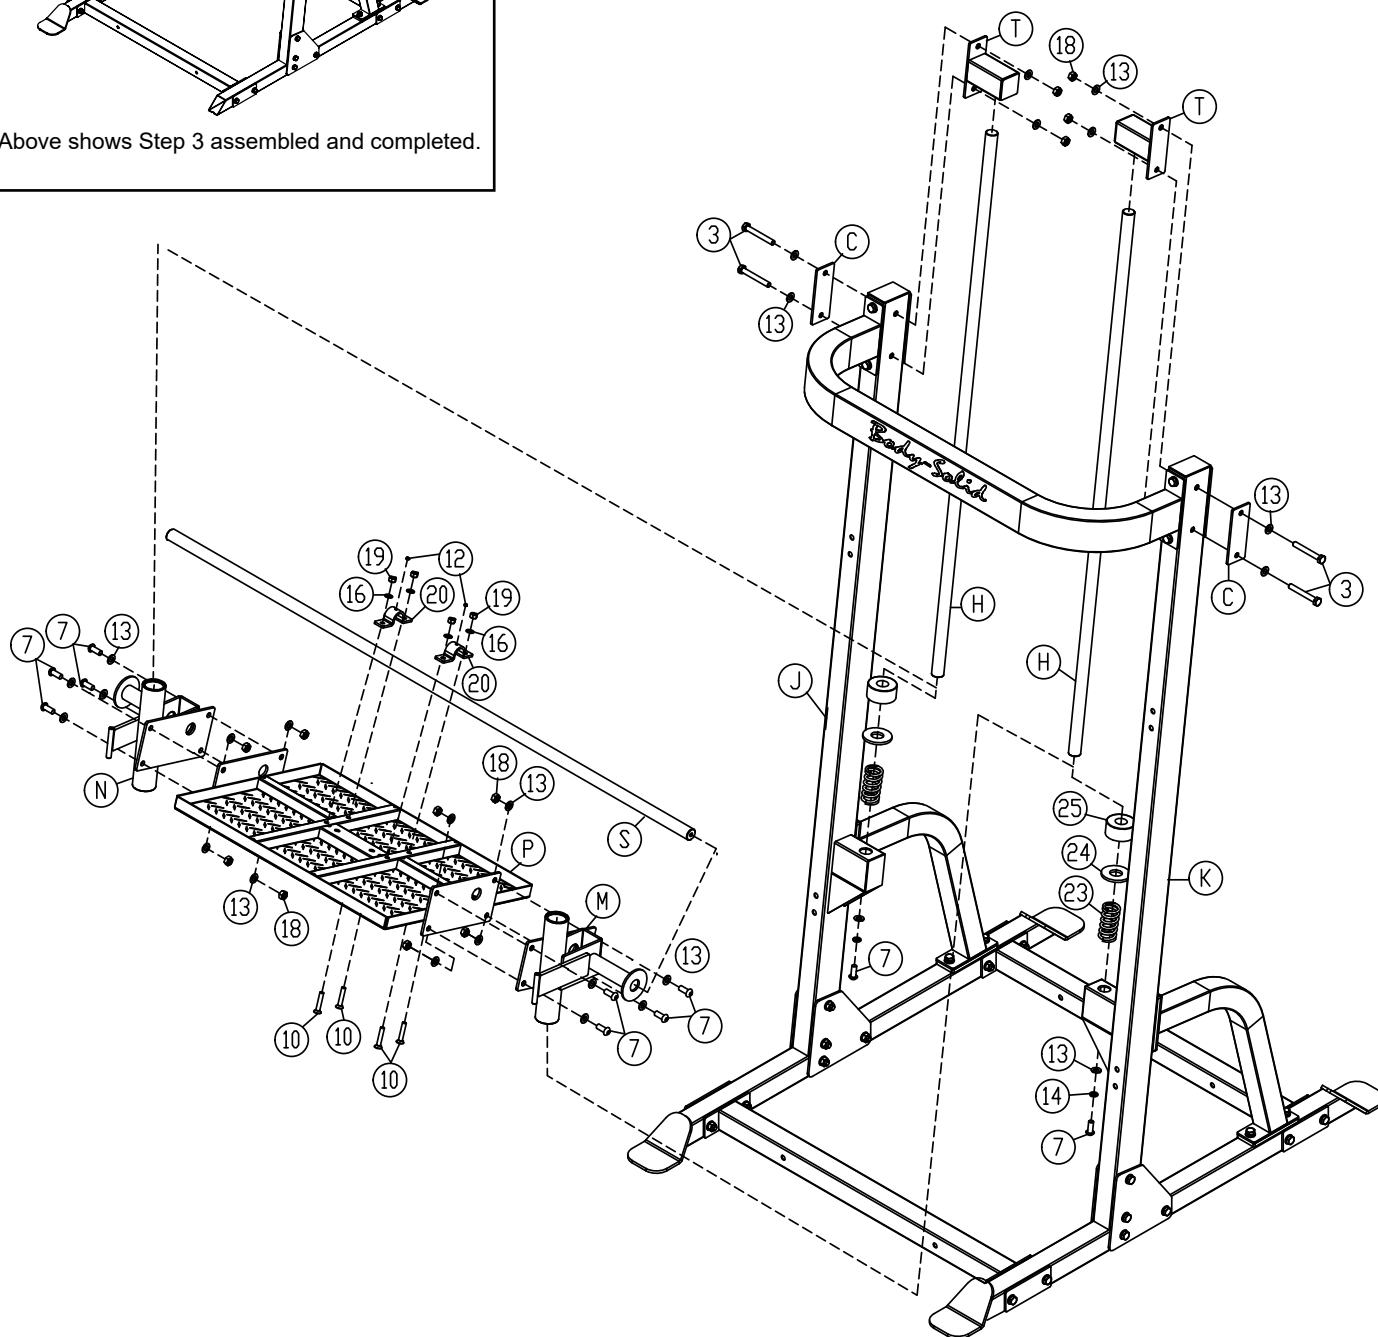


**STEP****4**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Wrench tighten ALL hardware at the end of STEP 4H. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.**

- 4A.** Attach Lower Brackets (**Z**) to Left & Right Uprights (**J & K**) using:
  - 4 - (#2) M10x95mm Hex Head Bolt**
  - 4 - (#13) M10 Washer**
  - 4 - (#15) M10 Large Washer**
  - 4 - (#18) M10 Nylon Lock Nut**
- 4B.** Insert Left & Right Safety Handle (**X & Y**) into Lower Brackets (**Z**).
- 4C.** Insert Left & Right Safety Handle (**X & Y**) into Left & Right Brackets (**V & W**).
- 4D.** Attach Left & Right Brackets (**V & W**) to Uprights (**J & K**) using:
  - 4 - (#2) M10x95mm Hex Head Bolt**
  - 4 - (#13) M10 Washer**
  - 4 - (#15) M10 Large Washer**
  - 4 - (#18) M10 Nylon Lock Nut**
- 4E.** Screw in M8x20mm Socket Head Cap Screws (**#11**) in Left & Right Safety Handle (**X & Y**).
- 4F.** Attach Center Weight Horn (**Q**) to Foot Plate (**P**) using:
  - 2 - (#6) M10x45mm Flat Head Cap Screw**
  - 2 - (#13) M10 Washer**
  - 2 - (#18) M10 Nylon Lock Nut**
- 4G.** Attach Weight Horn Tube (**R**) to Center Weight Horn (**Q**) using:
  - 1 - (#7) M10x25mm Button Head Cap Screw**
  - 1 - (#14) M10 Lock Washer**
  - 1 - (#15) M10 Large Washer**
- 4H.** Attach Weight Horn Tubes (**R**) to Weight Rod (**S**) using:
  - 2 - (#7) M10x25mm Button Head Cap Screw**
  - 2 - (#14) M10 Lock Washer**
  - 2 - (#15) M10 Large Washer**
- 4J.** Insert Plastic Round End Caps (**#28**) into Weight Horn Tubes (**R**).

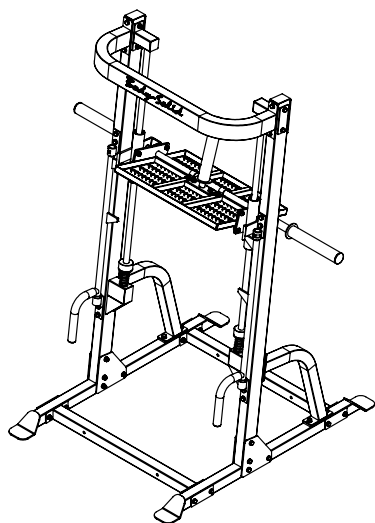

Above shows Step 4 assembled and completed.

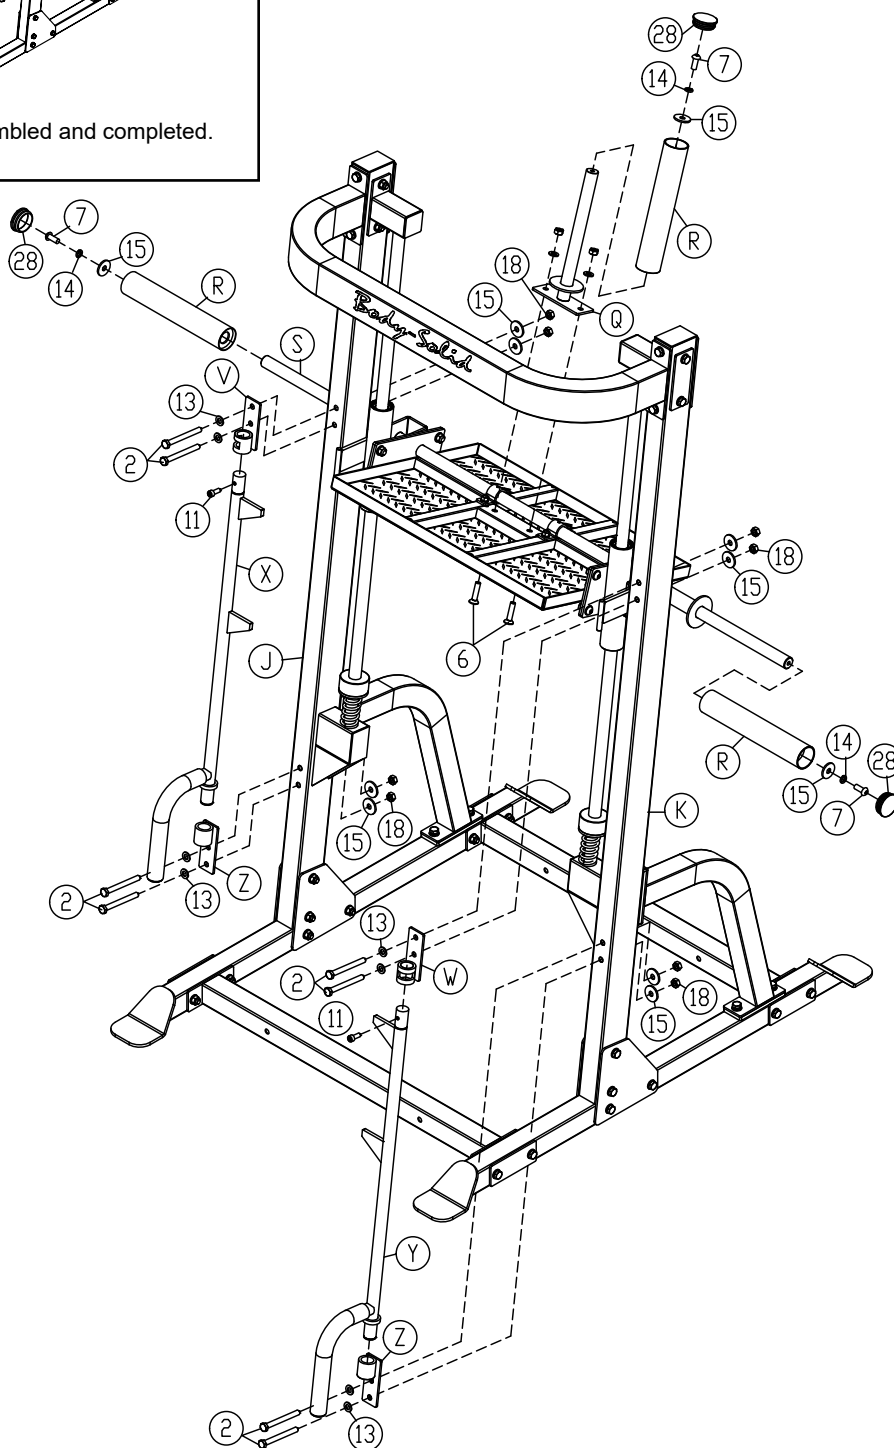


**STEP****5**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Wrench tighten ALL hardware at the end of each STEP . Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.**

- 5A.** Attach Handles (**G**) to Backrest Frame (**F**) using:
- 4 - (#5) M10x60mm Hex Head Bolt**
  - 8 - (#13) M10 Washer**
  - 4 - (#18) M10 Nylon Lock Nut**
- 5B.** Attach Backrest Pads (**#30**) to Backrest Frame (**F**) using:
- 12 - (#9) M8x55mm Hex Head Bolt**
  - 12 - (#16) M8 Washer**
  - 12 - (#17) M8 Lock Washer**
- 5C.** Attach Backrest Frame (**F**) to Center Base Frames (**B**) using:
- 4 - (#4) M10x70mm Hex Head Bolt**
  - 4 - (#13) M10 Washer**
  - 4 - (#15) M10 Large Washer**
  - 4 - (#18) M10 Nylon Lock Nut**

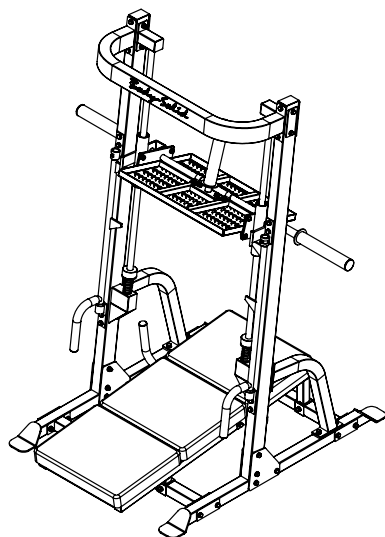


Above shows Step 5 assembled and completed.

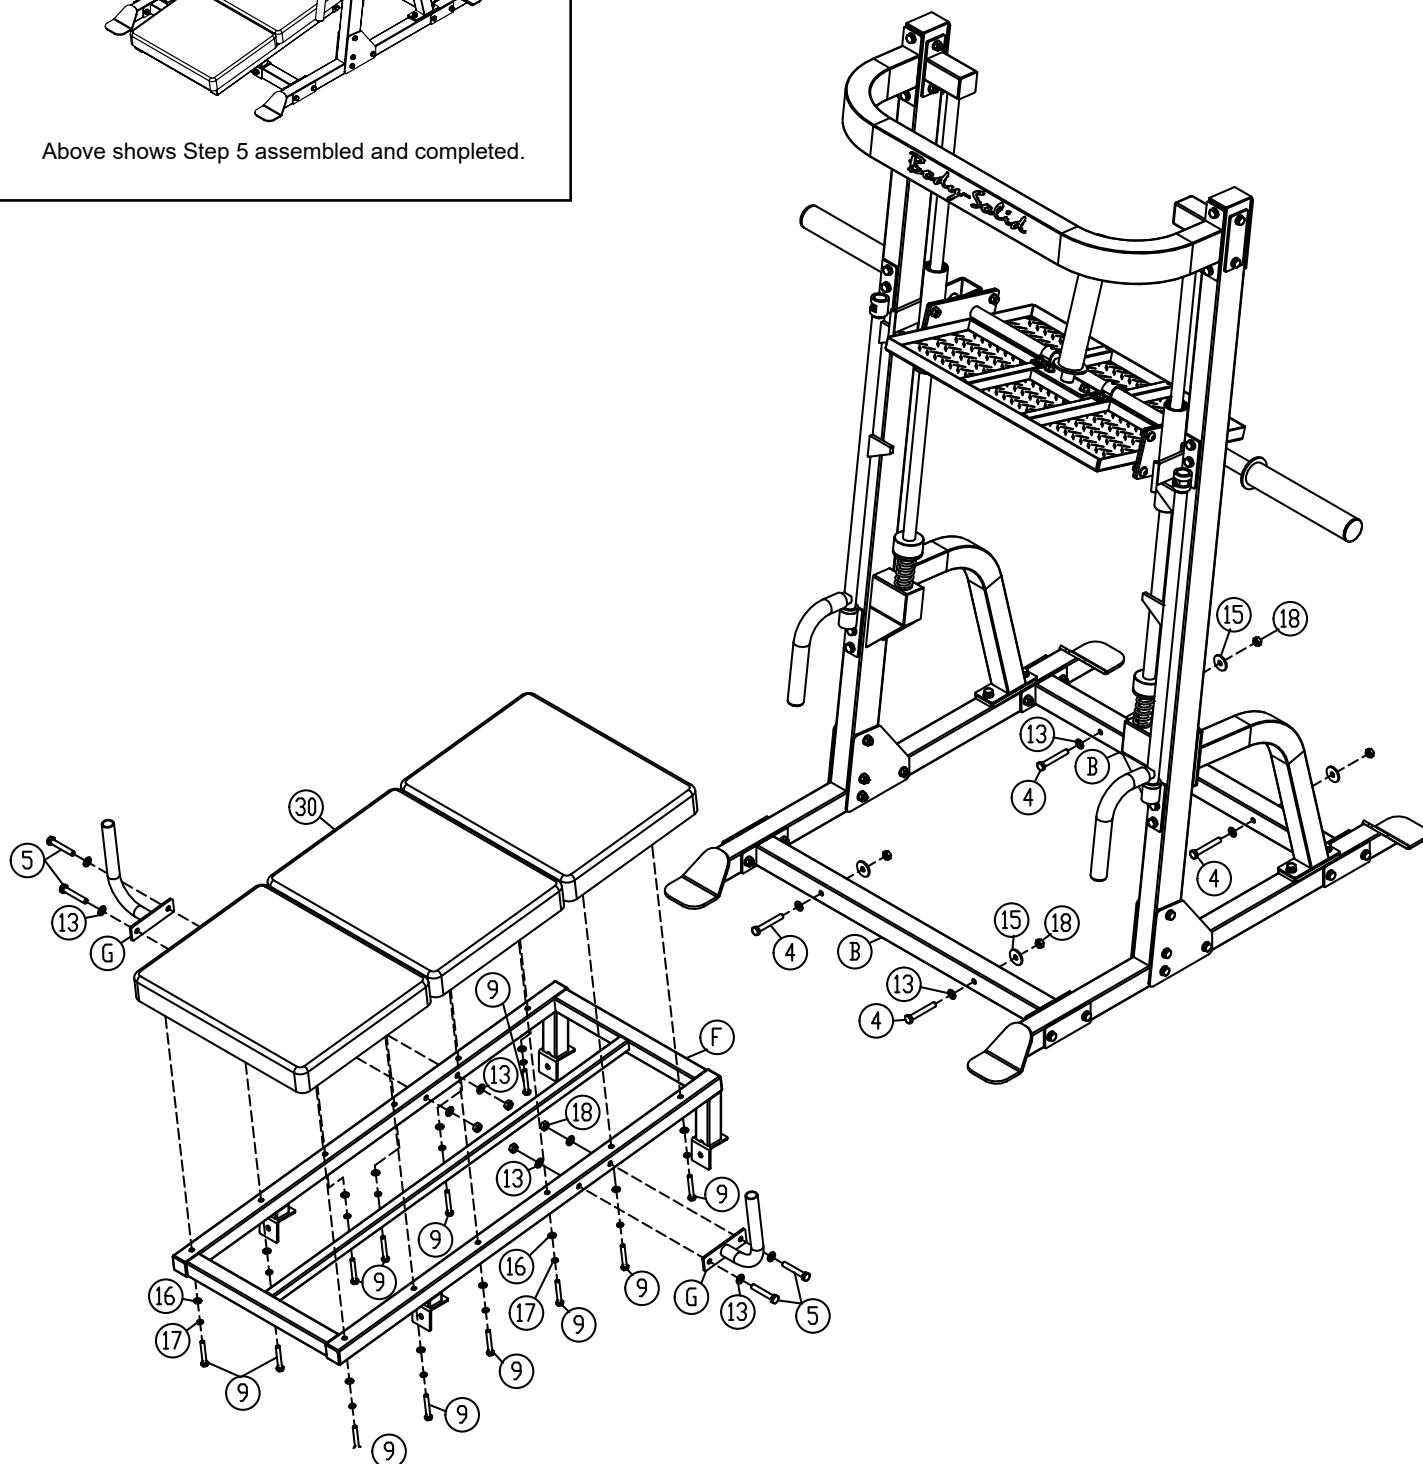



# GVLP Exploded View

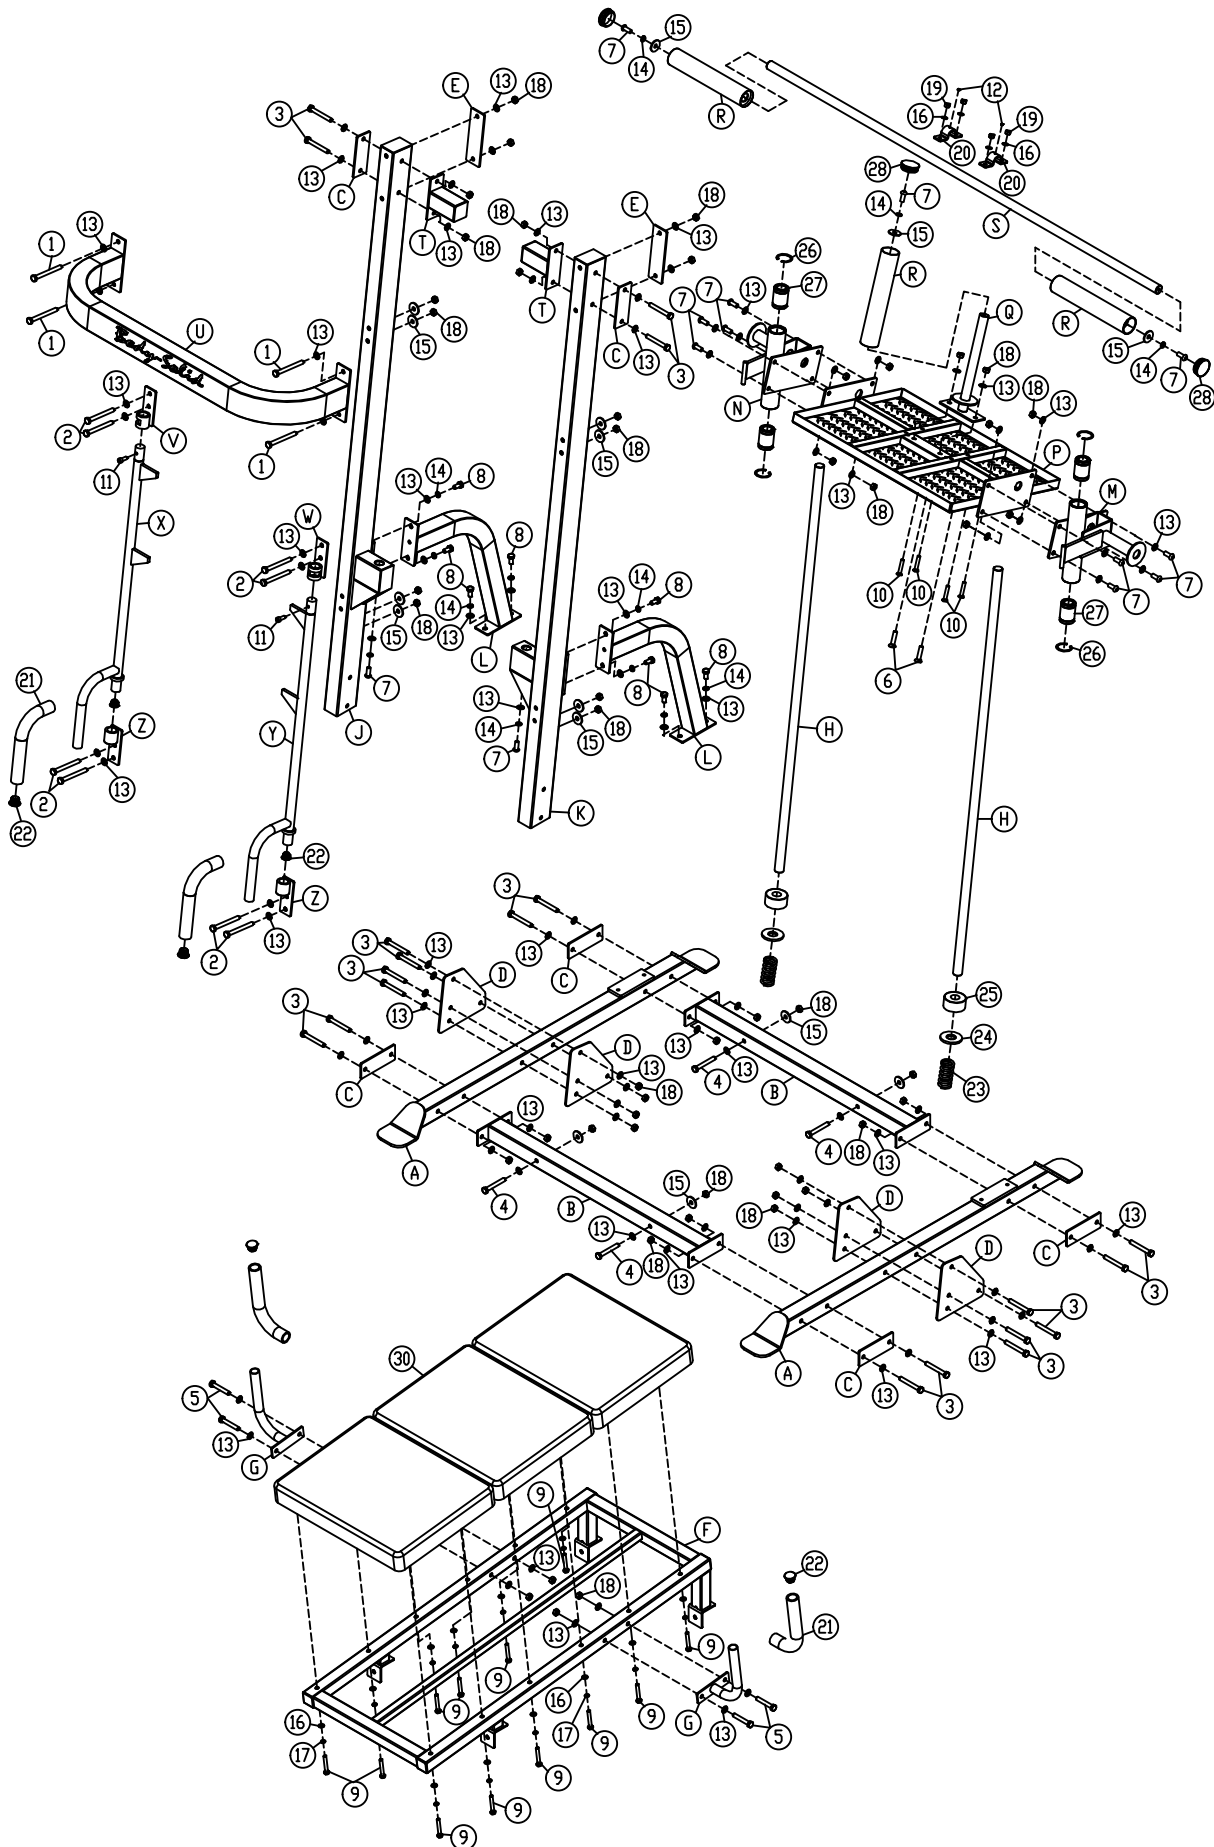



# GVLP

PLEASE WRITE YOUR SERIAL NUMBER IN THE BOXES BELOW

S/N # 019317----

1900 S. Des Plaines Ave.  
Forest Park, IL 60130  
Phone:(708)427-3555  
Fax:(708)427-3556  
Hours: M-F 8:30 - 5:00 CST

*[www.bodysolid.com](http://www.bodysolid.com)*

Copyright 2009. Body-Solid. All rights reserved. Body-Solid reserves the right to change design and specifications when we feel it will improve the product.  
Body-Solid machines maintain several patented and patent pending features and designs. All rights reserved on all design patents and utility patents.