


# Body-Solid®

Built for Life

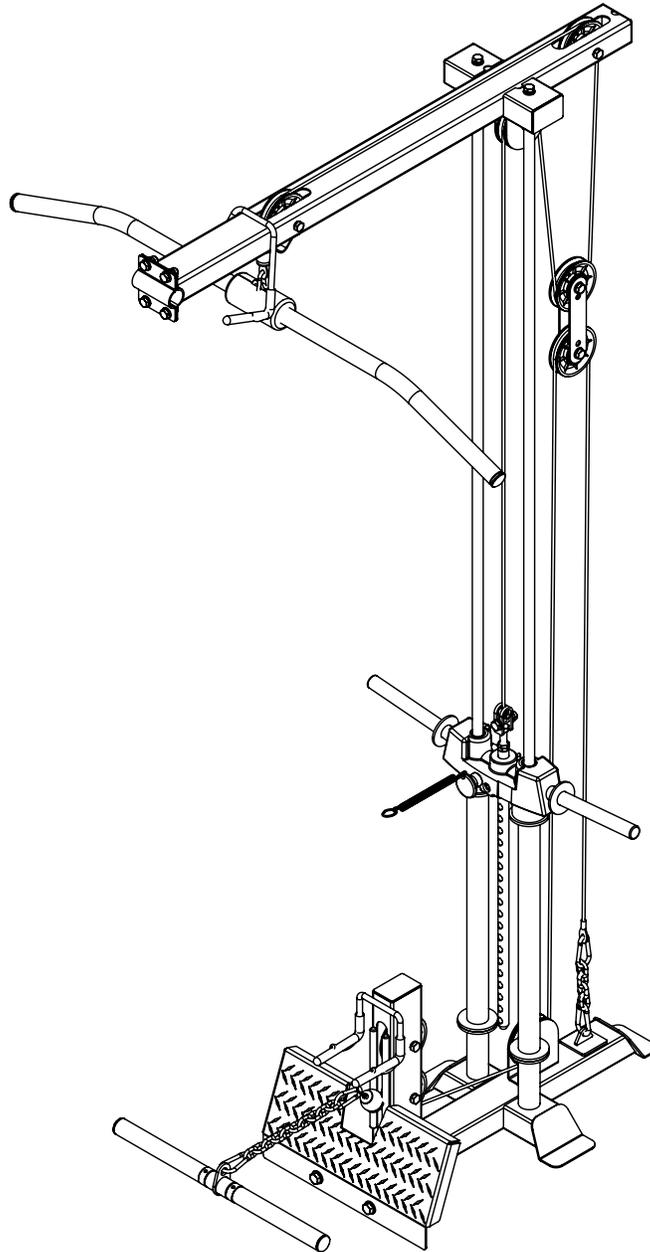

# SPRH LA

Assembly Instructions

**OWNER'S & MANUAL**

V. SPRHLA-20211201

# Warning, Safety & Maintenance

Be sure that all users carefully read and understand all warning, safety and maintenance labels on the machine before each use. Failure to do so may result in death or serious injury.

It is imperative that you retain this Owner's Manual and be sure all warning labels are legible and intact. Replacement Owner's Manuals and warning labels are available from your local Body-Solid dealer.

If you have any questions about the operation, set up or maintenance of this machine please call our customer service department at 1 (800) 556-3113.

**THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK, YOU MUST FOLLOW THESE RULES:**

1. Inspect equipment before each workout. Check that all nuts, bolts, screws and pop pins are in place and fully tightened. Also, before use, check cables for signs of wear. Replace all worn parts immediately. Never use machine if any parts are damaged or missing. **FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS INJURY.**
2. Keep clear of the cables and all moving parts when the machine is in use.
3. Always make sure all Snap Links are closed when doing any cable/pulley/strap exercises.
4. Exercise with care. Perform your exercises at a smooth moderate pace; never perform jerky or uncoordinated movements that may cause injury.
5. It is recommended that you should workout with a training partner.
6. Do not allow children or minors to play on or around this equipment.
7. If unsure of proper use of equipment, call your local Body-Solid distributor or the Body-Solid customer service department at 1-800-556-3113.
8. **WARNING:** Consult your physician before starting your exercise program. For your own safety, do not begin any exercise program without proper instruction. RAL8-6-03 WC-54

## WARNING

### Safety and Maintenance of Cables

**IMPORTANT:** Cables are wear items. It is your responsibility to prevent unexpected breakage. **Cable inspection should be performed daily.** Inspect all cables, the nylon coating on all cables, and the area near the fitting at each end of each cable. **Replace any damaged or worn cable immediately.** Do not allow the machine to be used until damaged or worn cables are replaced. Using or allowing a machine to be used with a suspect cable can result in serious injury. See Owner's Manual for more information.

For Body-Solid Customer Service  
**Call 1-800-556-3113**

<b>MAINTENANCE SCHEDULE</b>		D A I L Y	W E E K L Y
Check the function and integrity of the following components. As noted, inspect equipment before each workout. Replace all damaged, broken or worn components immediately.			
Cables:	Check tension, end fittings, and coating	✓	
	Check that locking nut at weight stack is tight		✓
Upholstery:	Wipe down and dry	✓	
	Clean and condition		✓
Frame:	Wipe down and dry	✓	
	Polish / Wax		✓
Chrome:	Wipe down and dry	✓	
	Polish / Lubricate		✓
Nuts / Bolts / Fasteners:	Tighten and / or adjust as needed		✓
Guide Rods:	Lubricate and clean		✓
Linear Rods:	Lubricate and clean		✓
Seat Sleeves:	Lubricate and clean		✓
Adjustments / Locking Pins / Tightening Knobs			✓
Weight Stack Pins			✓
Warning Instruction Labels			✓
Springs / Pop Pins		✓	
Anti Skid Surfaces			✓
Hand Grips / Rollers			✓

For Body-Solid Customer Service  
**Call 1-800-556-3113**  
#MSSTKR0803

## Table of Contents

- SAFETY INSTRUCTIONS..... PAGE 4
- PREPARATION..... PAGE 5
- PART / HARDWARE LIST..... PAGE 6
- HARDWARE ILLUSTRATION..... PAGE 8
- ASSEMBLY INSTRUCTIONS..... PAGE 12
- EXPLODED VIEW..... PAGE 23
- CONTACT PAGE..... PAGE 24

# Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

*Il est conseillé de subir un examen médical complet avant d'entreprendre tout programme d'exercice.  
Si vous avez des étourdissements ou des faiblesses, arrêtez les exercices immédiatement.*

*Antes de comenzar cualquier programa de ejercicios, deberías tener un examen físico con su doctor.*

## **When using exercise equipment, you should always take basic precautions, including the following:**

- Read all instructions before using the **SPRHLA**. These instructions are written to ensure your safety and to protect the unit.
- **Do not remove any safety labels from the machine.**
- Do not allow children on or near the equipment.
- Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer. Such attachments might cause injuries.
- Wear proper exercise clothing and shoes for your workout, no loose clothing.
- Keep hands, limbs, loose clothing, and long hair well out of the way of all moving parts.
- Use care when getting on or off the unit.
- Do not overexert yourself or work to exhaustion.
- If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- Never operate unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.
- Never drop or insert objects into any opening in the equipment.
- Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- Do not use the equipment outdoors or near water.

## **Personal Safety During Assembly**

- Before beginning assembly, please take the time to read the instructions thoroughly.
- Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the **SPRHLA** on a solid, level surface. Locate the unit a few feet from the walls or furniture to provide easy access.

The **SPRHLA** is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Body-Solid **HALF RACK LAT ATTACHMENT**.

After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call the dealer from whom you purchased the machine or call **1-800-556-3113** for the dealer nearest you.

## **Obtaining Service**

Please use this Owner's Manual to make sure that all parts have been included in your shipment. When ordering parts, you must use the part number and description from this Owner's Manual. Use only Body-Solid replacement parts when servicing this machine. Failure to do so will void your warranty and could result in personal injury.

For information about product operation or service, check out the official Body-Solid website at [www.bodysolid.com](http://www.bodysolid.com) or contact an authorized Body-Solid dealer or a Body-Solid factory-authorized service company or contact Body-Solid customer service at one of the following:

**Toll Free: 1-800-556-3113**  
**Phone: 1-708-427-3555**  
**Fax: 1-708-427-3556**  
**Hours: M-F 8:30-5:00 CST**  
**E-Mail: [service@bodysolid.com](mailto:service@bodysolid.com)**

**Or write to:           Body-Solid, Inc.**  
**Service Department**  
**1900 S. Des Plaines Ave.**  
**Forest Park, IL 60130 USA**

**Retain this Owner's Manual for future reference. If you need to order replacement parts please be prepared to provide the following information when contacting us so that we can assist you better.**

- 1. Model Number**
- 2. Place of Purchase**
- 3. Serial Number (S/N)**
- 4. Part # and Description**

# Preparation

Thank you for purchasing the **SPRHLA**. This Product is part of the Body-Solid line of quality strength training machines, which lets you target specific muscle groups to achieve better muscle tone and overall body conditioning. To maximize your use of the equipment please study this Owner's Manual thoroughly.

## Required Tools

The basic tools that you must obtain before assembling the **SPRHLA** include but are not limited to:

- Standard Wrench Set
- Metric Wrench Set
- Adjustable Wrench

## Installation Requirements

Follow these installation requirements when assembling the **SPRHLA**:

Set up the **SPRHLA** on a solid, flat surface. A smooth, flat surface under the machine helps keep it level. A level machine has fewer malfunctions.

Provide ample space around the machine. Open space around the machine allows for easier access.

Insert all bolts in the same direction. For aesthetic purposes, insert all bolts in the same direction unless specified (in text or illustrations) to do otherwise.

Leave room for adjustments. Tighten fasteners such as bolts, nuts, and screws so the unit is stable, but leave room for adjustments. Do not fully tighten fasteners until instructed in the assembly steps to do so.

Fill out and mail the warranty card.

## Assembly Tips


Read all "Notes" on each page before beginning each step.

While you may be able to assemble the **SPRHLA** using the illustrations only, important safety notes and other tips are included in the text.

Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.

**NOTE:** With so many assembled parts, proper alignment and adjustment is critical. While tightening the nuts and bolts, be sure to leave room for adjustments.

**CAUTION:** Obtain assistance! If you feel like you can't assemble the **SPRHLA** by yourself then do not attempt to do so as this could result in injury. Review the installation requirements before proceeding with the following steps.

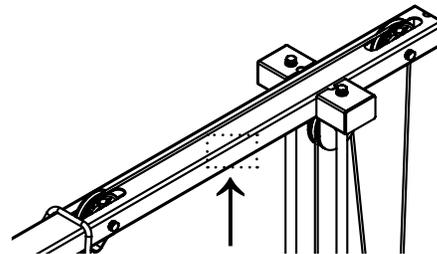

Your S/N# can  
be found here

Body-Solid continually seeks ways to improve the performance, specifications and product manuals in order to ensure that only superior products are released from our factories. Please take the time to carefully read through this manual thoroughly. Instructions contained in this document are not intended to cover all details or variations possible with Body-Solid equipment, or to cover every contingency that may be met in conjunction with installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this manual, the matter should be directed to your local Body-Solid representative, or the Service Department at Body-Solid Inc. in Forest Park, Illinois.

## SPRHLA Parts & Hardware List

<b>Part#</b>	<b>Qty</b>	<b>Description</b>
A	1	BASE FRAME
B	1	FOOT PLATE
C	2	GUIDE ROD
D	1	TOP FRAME
E	1	MOUNTING BRACKET
F	1	LAT BAR
G	1	LOW ROW BAR
H	2	LONG WEIGHT RISER
K	2	PULLEY BRACKET
1	2	M12x105mm HEX HEAD BOLT
2	2	M10x90mm HEX HEAD BOLT
3	2	M10x65mm HEX HEAD BOLT
4	4	M10x45mm HEX HEAD BOLT
5	1	M10x45mm SOCKET HEAD CAP SCREW
6	1	M10x40mm HEX HEAD BOLT
7	4	M10x25mm HEX HEAD BOLT
8	2	M10x20mm HEX HEAD BOLT
9	1	M4x10mm SET SCREW
10	4	M12 FLAT WASHER
11	20	M10 FLAT WASHER
12	3	M10 LOCK WASHER
13	2	M12 NYLON LOCK NUT
14	13	M10 NYLON LOCK NUT
15	2	M12 JAM NUT
16	2	LOW ROW BAR GRIP
17	4	PLASTIC END CAP
18	4	HOOK SLEEVE
19	1	SELECTOR ROD TOP BOLT
20	1	CABLE LOCK
21	4	LONG SPACER
22	8	PULLEY
23	1	TOP CABLE 3405mm

## SPRHLA Parts & Hardware List



<b>Part#</b>	<b>Qty</b>	<b>Description</b>
24	1	LOW CABLE 3405mm
25	5	SNAP LINK
26	4	SHORT SPACER
27	1	LONG CHAIN
28	1	SHORT CHAIN
29	1	FOAM ROLLER
30	1	SELECTOR ROD
31	2	RUBBER DONUT
32	1	TOP PLATE
33	1	WEIGHT SELECTOR PIN
34	2	LAT BAR GRIP

# SPRHLA Hardware Illustration

Part #1

HEX HEAD BOLT M12x105mm



QTY. 2

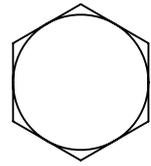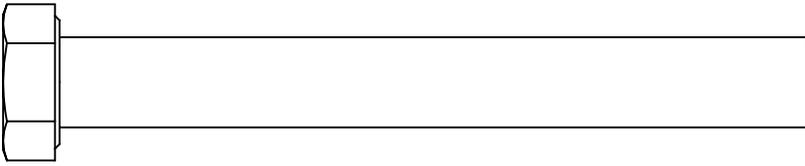

Part #2

HEX HEAD BOLT M10x90mm



QTY. 2

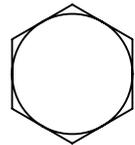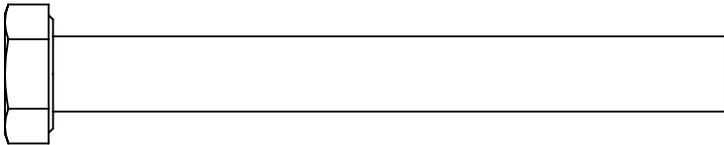

Part #3

HEX HEAD BOLT M10x65mm




QTY. 2

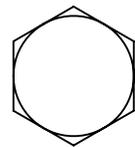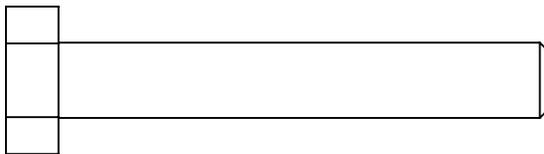

Part #4

HEX HEAD BOLT M10x45mm

QTY. 4

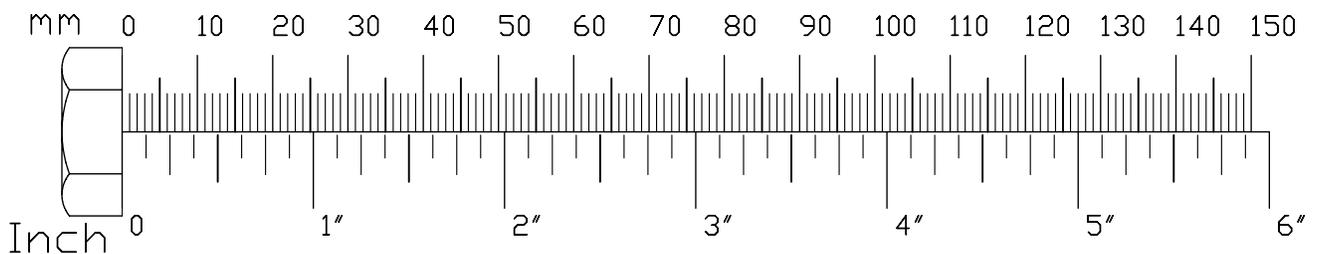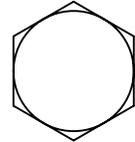
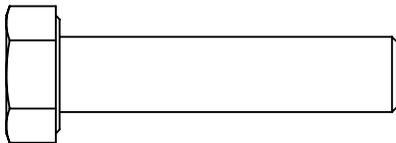


# SPRHLA Hardware Illustration

Part #5

SOCKET HEAD CAP SCREW M10x45mm



QTY. 1

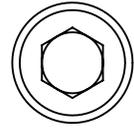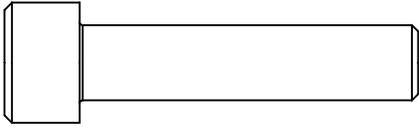

Part #6

HEX HEAD BOLT M10x40mm



QTY. 1

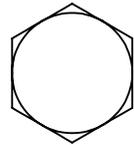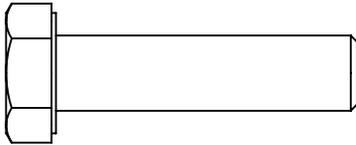

Part #7

HEX HEAD BOLT M10x25mm




QTY. 4

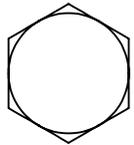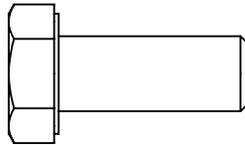

Part #8

HEX HEAD BOLT M10x20mm

QTY. 2

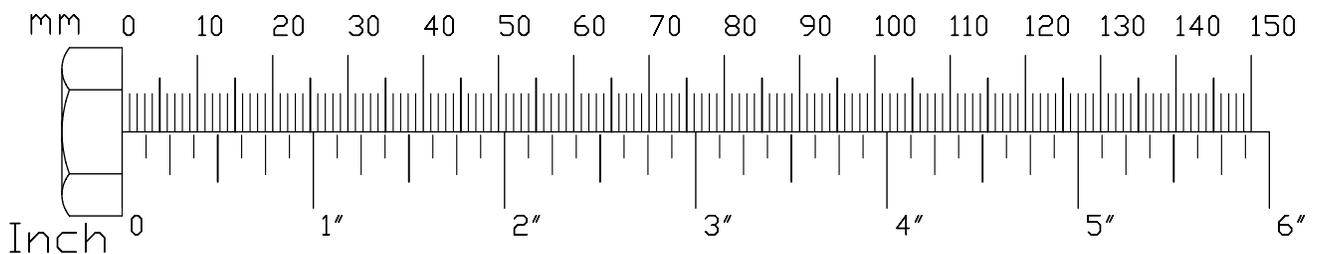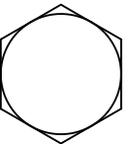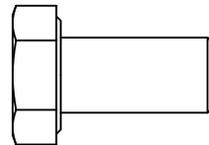

# SPRHLA Hardware Illustration

Part #9

SET SCREW M4x10mm


QTY. 1



Part #10

M12 FLAT WASHER


QTY. 4

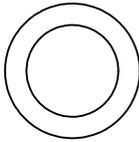

Part #11

M10 FLAT WASHER



QTY. 20

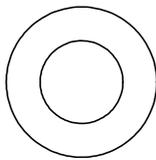

Part #12

M10 LOCK WASHER

QTY. 3

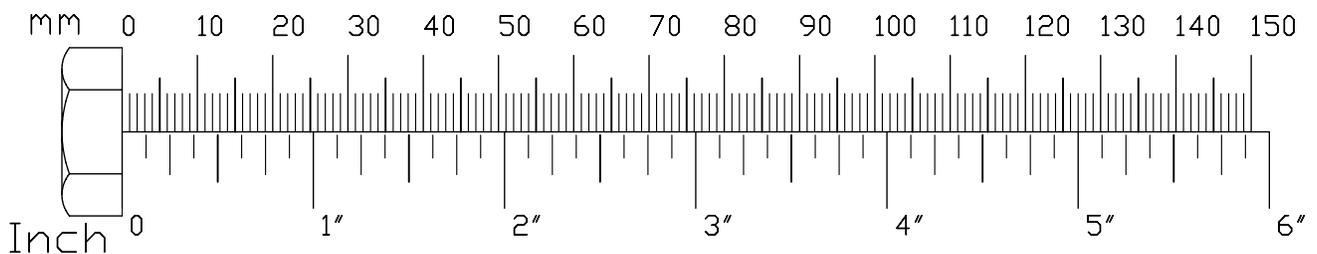
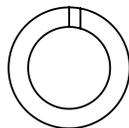


# SPRHLA Hardware Illustration

Part #13

M12 NYLON LOCK NUT



QTY. 2

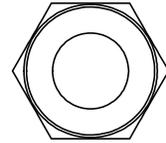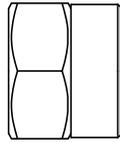

Part #14

M10 NYLON LOCK NUT



QTY. 13

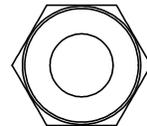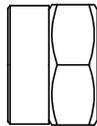

Part #15

M12 JAM NUT

QTY. 2

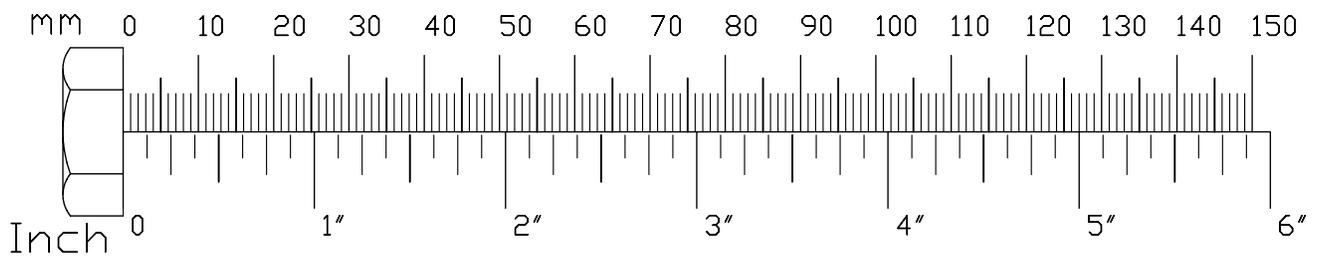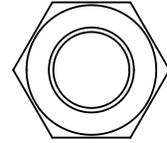

## STEP


# 1

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Finger tighten all hardware in this step. DO NOT wrench tighten until instructed. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tightened to fully go on.**

- 1A.** Attach Base Frame (A) & Foot Plate (B) to Rear Frame of the Half Rack (M) using:
- 2 - (#1) M12x105mm Hex Head Bolt**
  - 4 - (#10) M12 Flat Washer**
  - 2 - (#13) M12 Nylon Lock Nut**

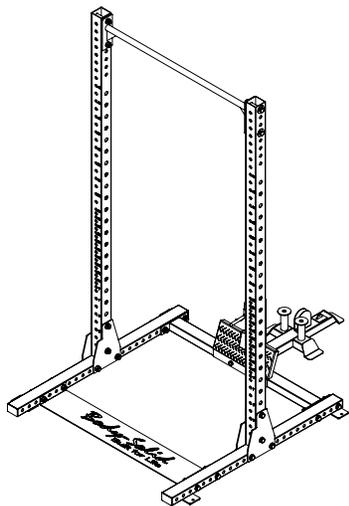

Above shows Step 1 assembled and completed.

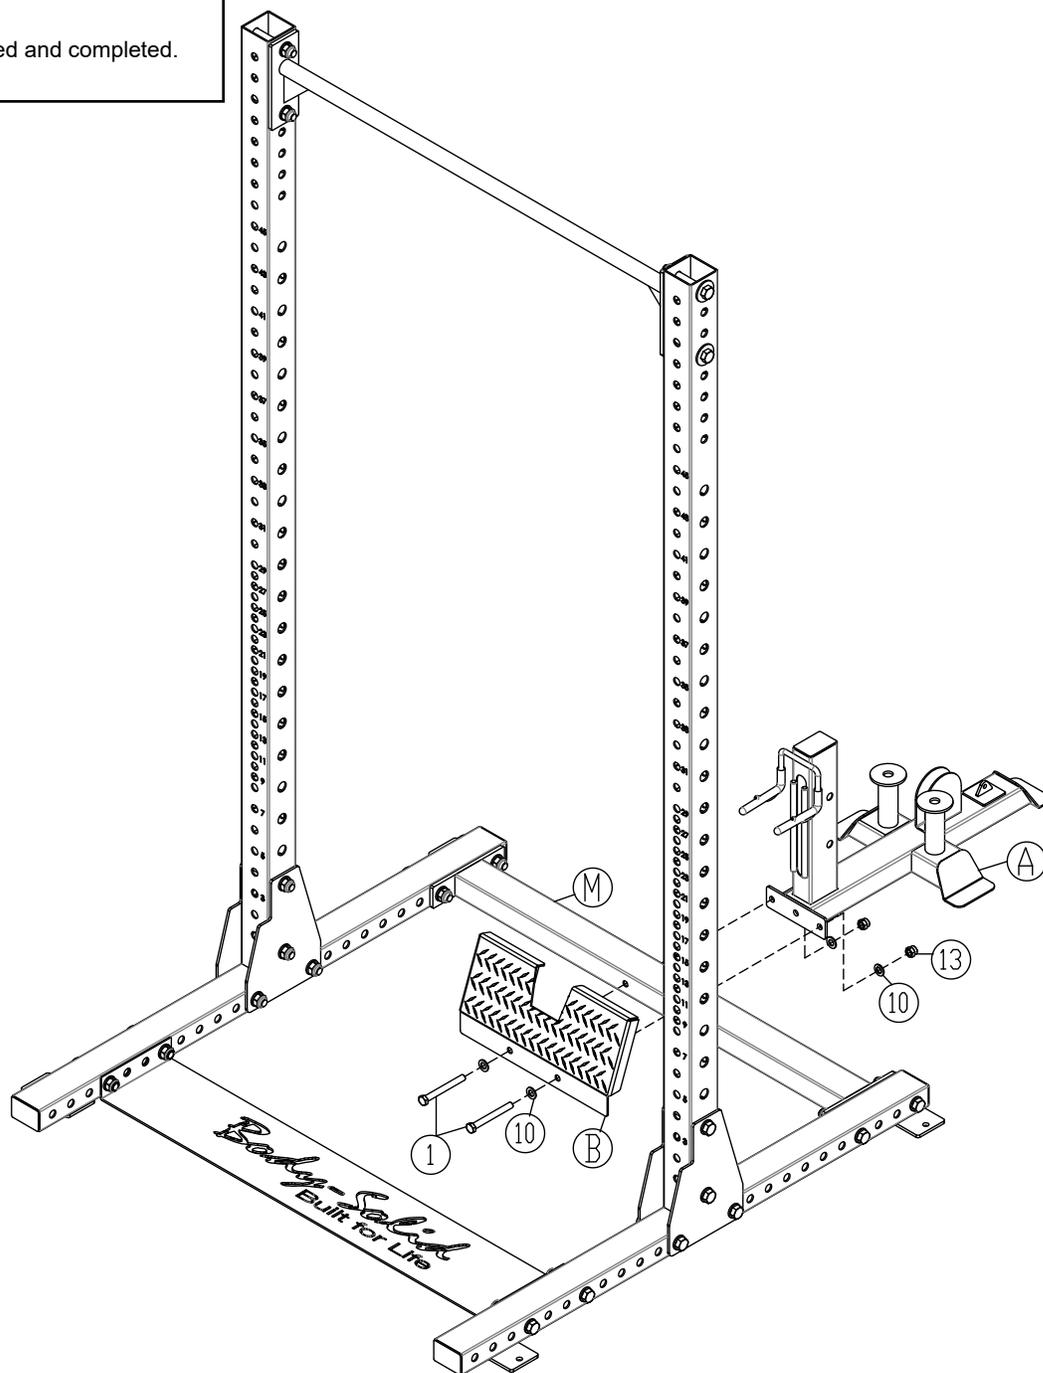

**STEP****2**

**Be careful to assemble all components in the sequence they are presented.**

**NOTE:**

**Finger tighten all hardware in this step. DO NOT wrench tighten until instructed. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tightened to fully go on.**

**NOTE: There are two options for weight installation.**

**2A.** Install Guide Rods (**C**) onto the holes of Base Frame (**A**).

**Note: Make sure the threaded end faces up.**

**2B.** Attach Selector Rod (**#30**) to Top Plate (**#32**) using:

**1 - (#5) M10x45mm SOCKET HEAD CAP SCREW**

**1 - (#12) M10 LOCK WASHER**

**Option #1:**

**2C.** Install Long Weight Risers (**H**) and slide to the bottom of the Guide Rods (**C**).

**2D.** Install Rubber Donuts (**#31**) and slide to the bottom of the Guide Rods (**C**).

**2E.** Install Top Plate (**#32**) onto the Guide Rods (**C**).

**Option #2:**


**2C.** Install Rubber Donuts (**#31**) and slide to the bottom of the Guide Rods (**C**).

**2D.** Slide 20pcs of weight plates (**#35**) onto Guide Rods (**C**).  
Be careful to hold guide rods steadily when installing weight plates.


**2E-.** Install Top Plate (**#32**) onto the Guide Rods (**C**).

**Note: Please make sure the grooves of the weight plates are faced down during installation.**



**STEP**  
**2**

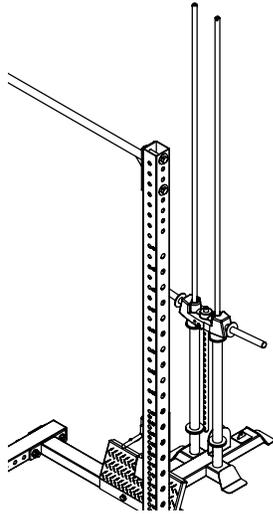

Above shows Step 2 (Option #1) assembled and completed.

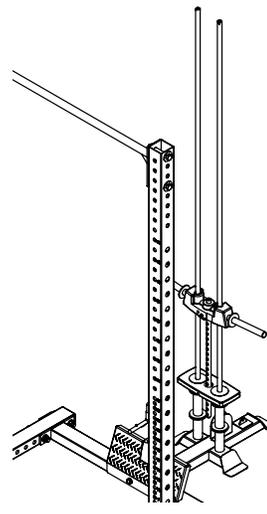

Above shows Step 2 (Option #2) assembled and completed.

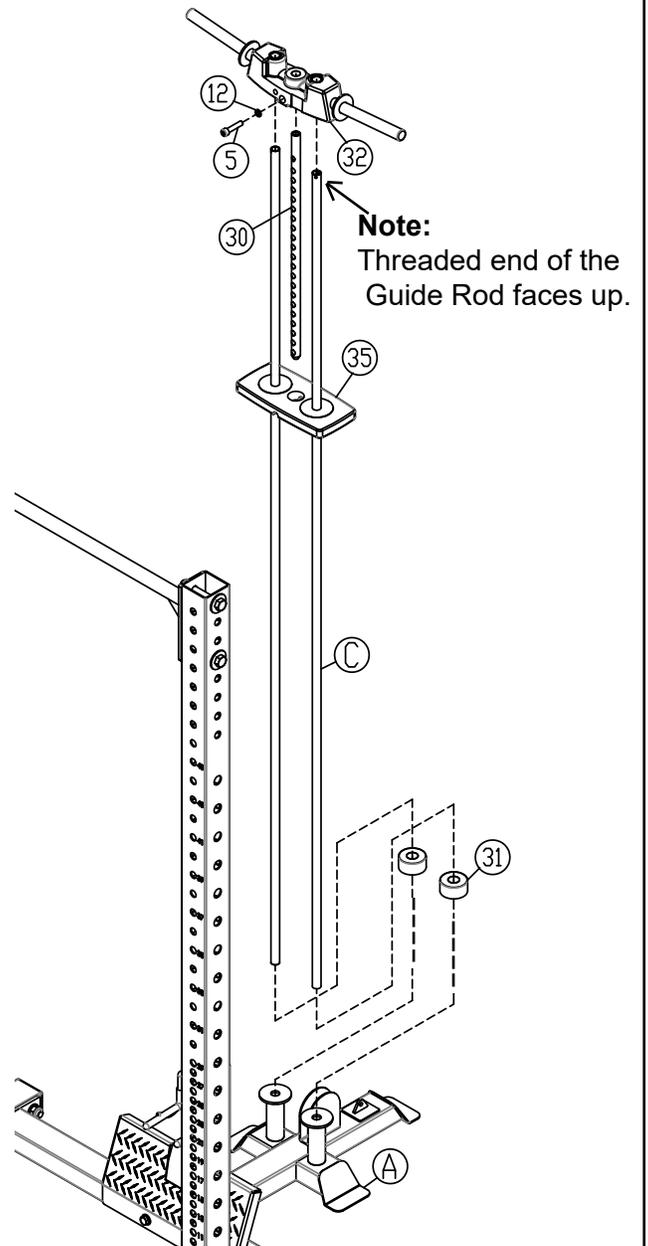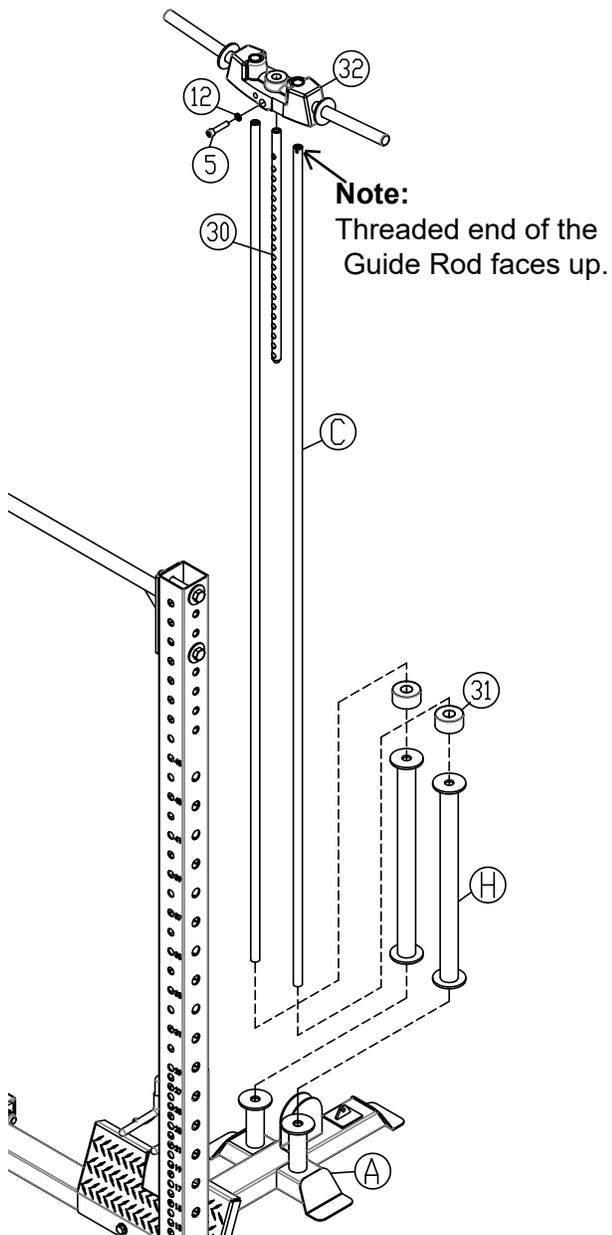


**STEP****3**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Wrench tighten ALL hardware at the end of STEP 3B. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.**

- 3A.** Attach Top Frame (D) to Half Rack (L) using:
- 4 - (#7) M10x25mm Hex Head Bolt**
  - 8 - (#11) M10 Flat Washer**
  - 4 - (#14) M10 Nylon Lock Nut**
  - 1 - (E) Mounting Bracket**
- 3B.** Attach Top Frame (D) to Guide Rods (C) using:
- 2 - (#8) M10x20mm Hex Head Bolt**
  - 2 - (#11) M10 Flat Washer**
  - 2 - (#12) M10 Lock Washer**

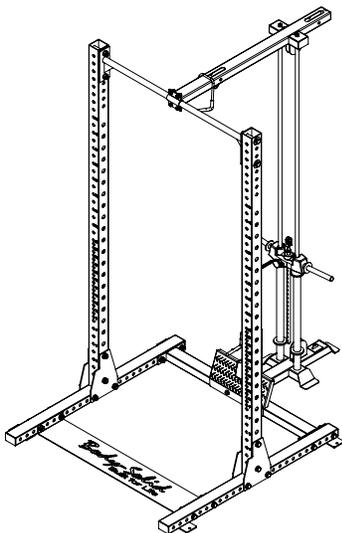

Above shows Step 3 assembled and completed.

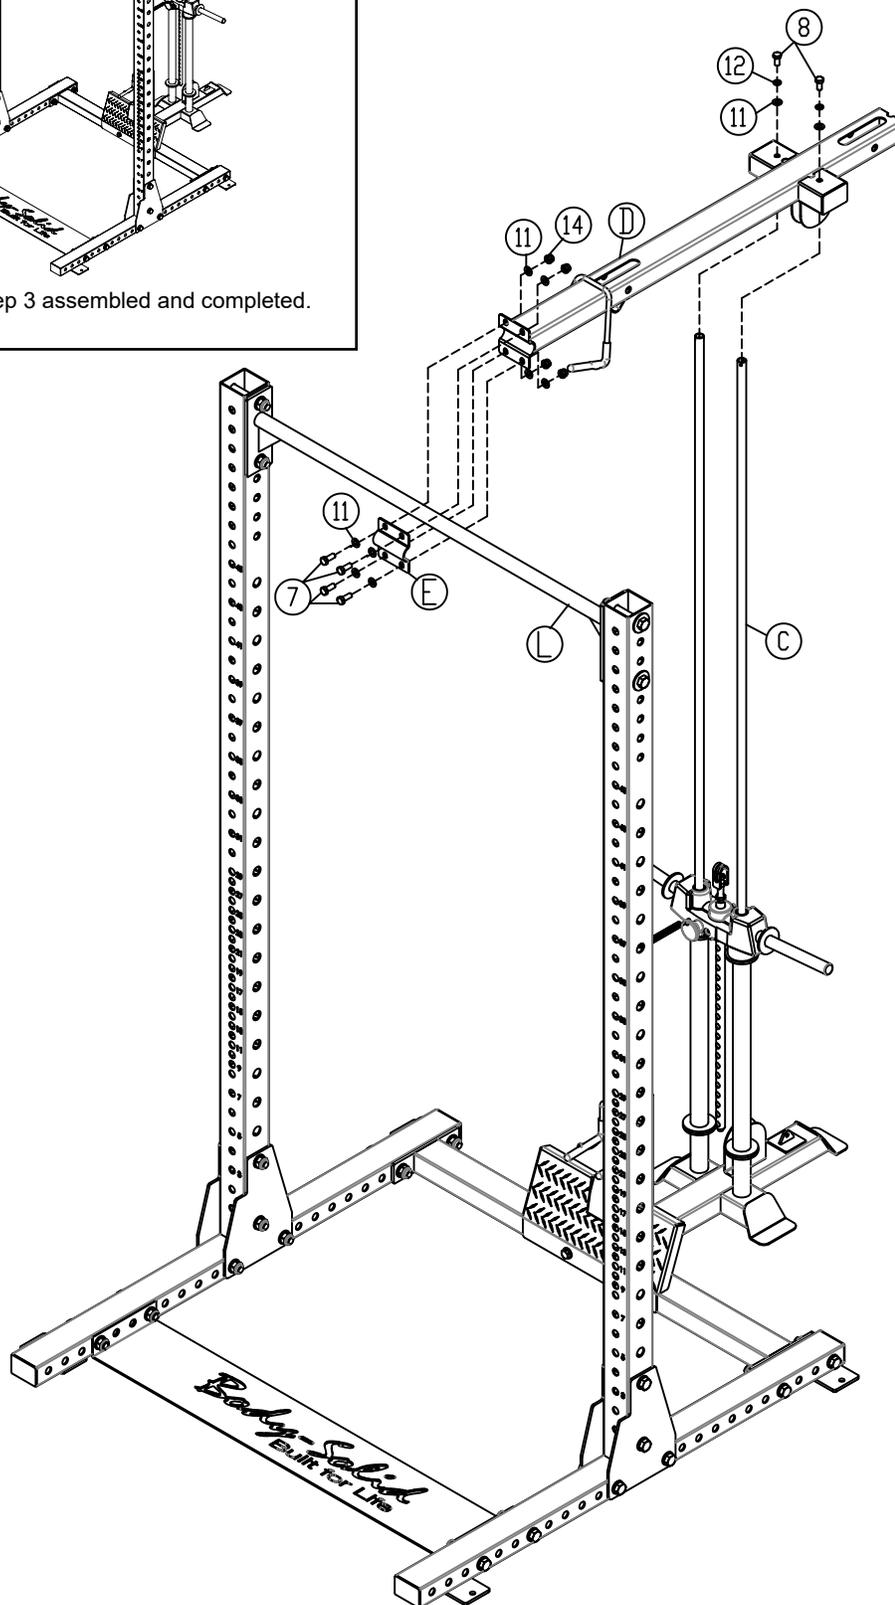

**STEP****4**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tightened to fully go on.**




- 4A.** Put the Key Ring of the Weight Selector Pin (**#33**) onto the threaded end of the Selector Rod Top Bolt (**#19**).
- 4B.** Install the Selector Rod Top Bolt (**#19**), Two M12 JAM Nuts (**#15**) onto the Top Plate (**#32**).
- 4C.** Route Top Cable (**#23**) and Install four Pulleys (**#22**) as shown in Step 4 Drawing.
- 2 - (#2) M10x90mm Hex Head Bolt**
  - 2 - (#4) M10x45mm Hex Head Bolt**
  - 4 - (#11) M10 Flat Washer**
  - 4 - (#14) M10 Nylon Lock Nut**
  - 4 - (#21) Long Spacer**
  - 2 - (K) Pulley Bracket**

**NOTE: Cable (#23) must go over Top Frame (D). Do not put Cable (#38) through Top Frame (D).**

- 4D.** Install Top Cable (**#23**) by first assembling the small ball end into the Selector Rod Top Bolt (**#19**) and attaching the Cable Cylinder Lock (**#20**) over the ball end of the cable. Secure it by tightening M4x10mm Set Screw (**#9**)
- 4E.** Install the M10X40mm Hex Head Bolt (**#6**) with two M10 Flat Washer (**#11**) through the slot hole of the Selector Rod Top Bolt (**#19**) by fastening the M10 Nylon Lock Nut (**#14**).
- 4F.** Route Low Cable (**#24**) and Install three Pulleys (**#26**) as shown in Step 4 Drawing.
- 2 - (#3) M10x65mm Hex Head Bolt**
  - 1 - (#4) M10x45mm Hex Head Bolt**
  - 2 - (#11) M10 Flat Washer**
  - 3 - (#14) M10 Nylon Lock Nut**
  - 4 - (#26) Short Spacer**
  - 2 - (K) Pulley Bracket**
- 4G.** Attach Low Cable (**#24**) to Base Frame (**A**).

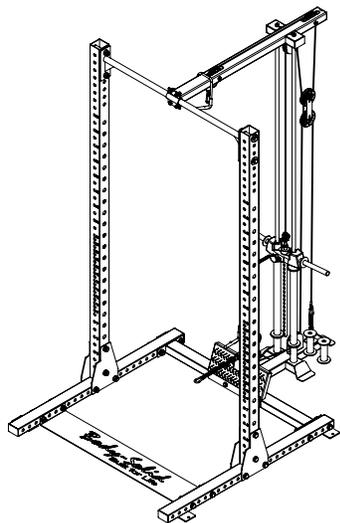

Above shows Step 3 assembled and completed.

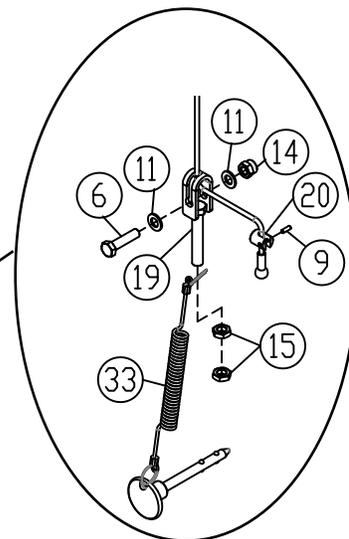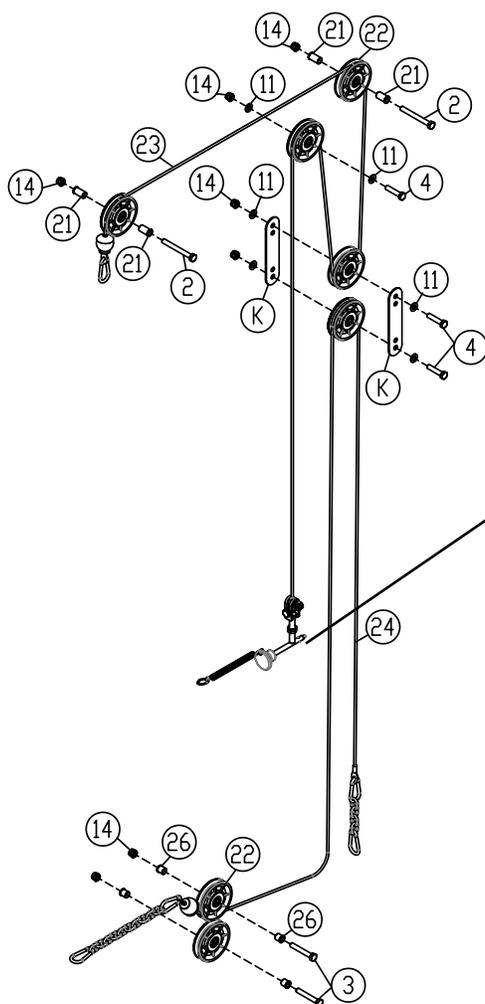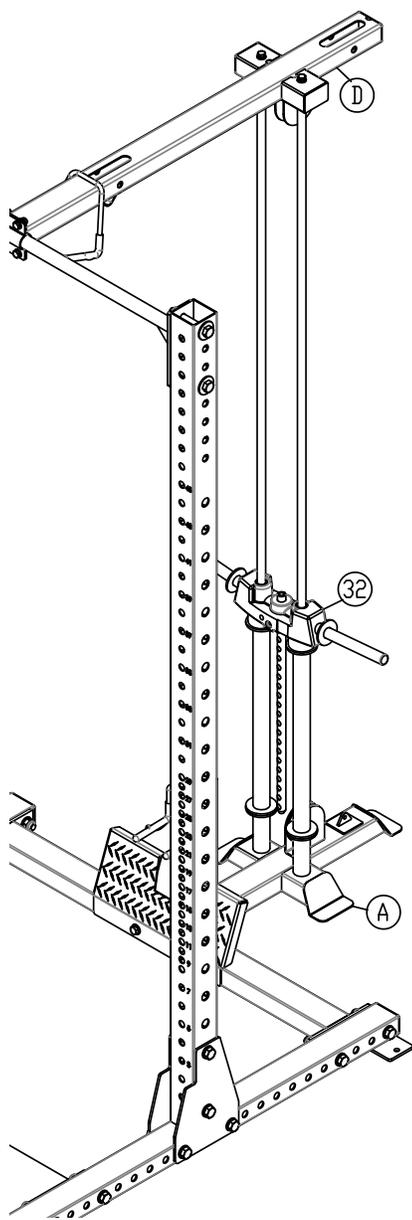


**STEP****5**

**Be careful to assemble all components in the sequence they are presented.**


**NOTE:**

**Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tightened to fully go on.**

- 5A.** Attach Lat Bar (**F**) to Top Cable (**#23**).
- 5B.** Attach Low Row Bar (**G**) to low Cable (**#24**).

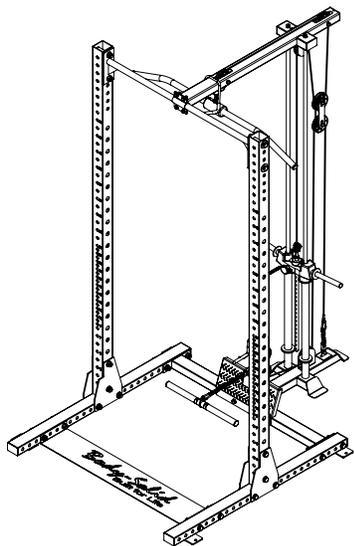


Above shows Step 3 assembled and completed.

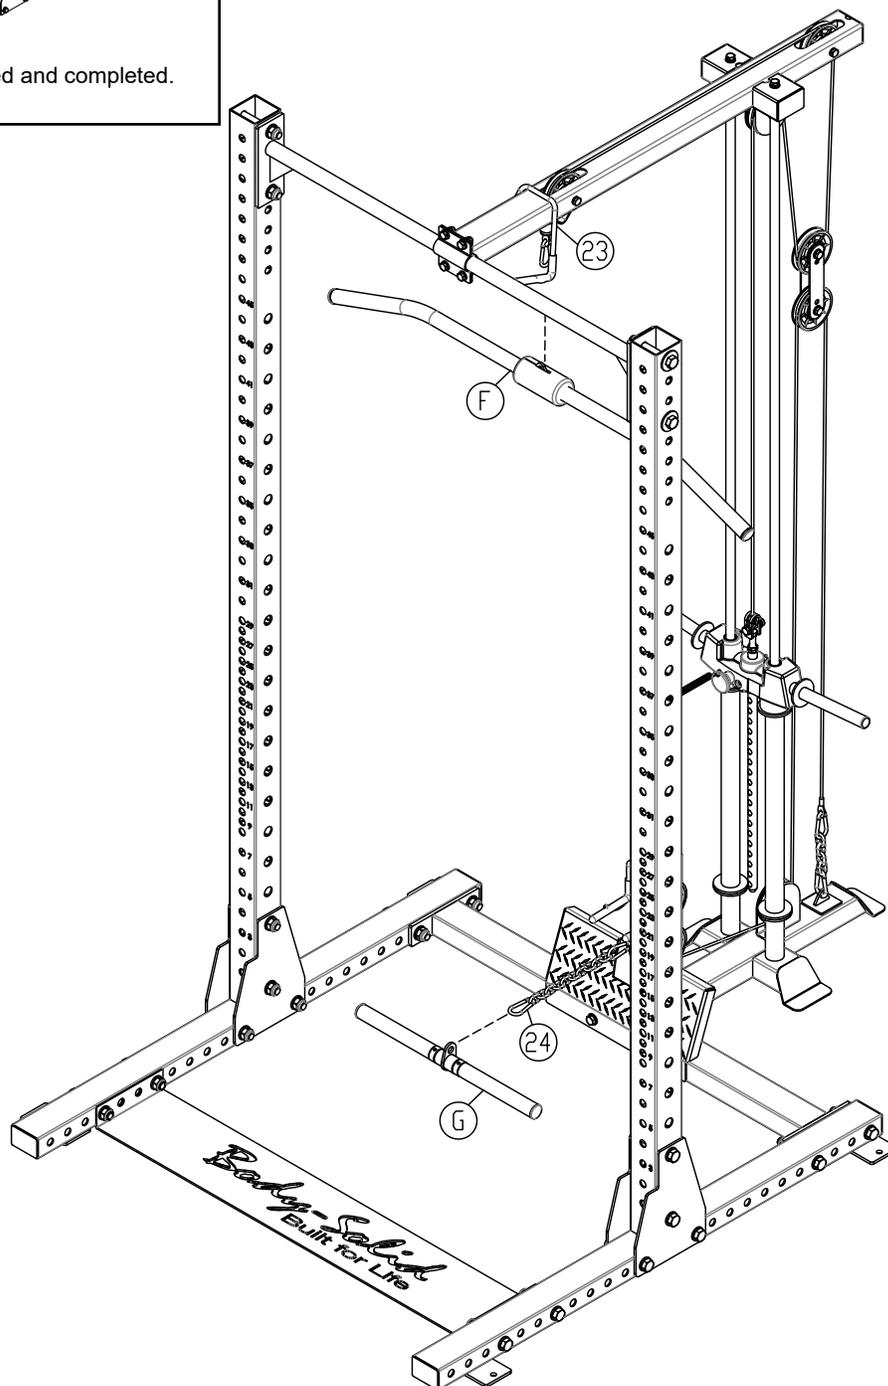

# Notes

# SPRHLA Exploded View

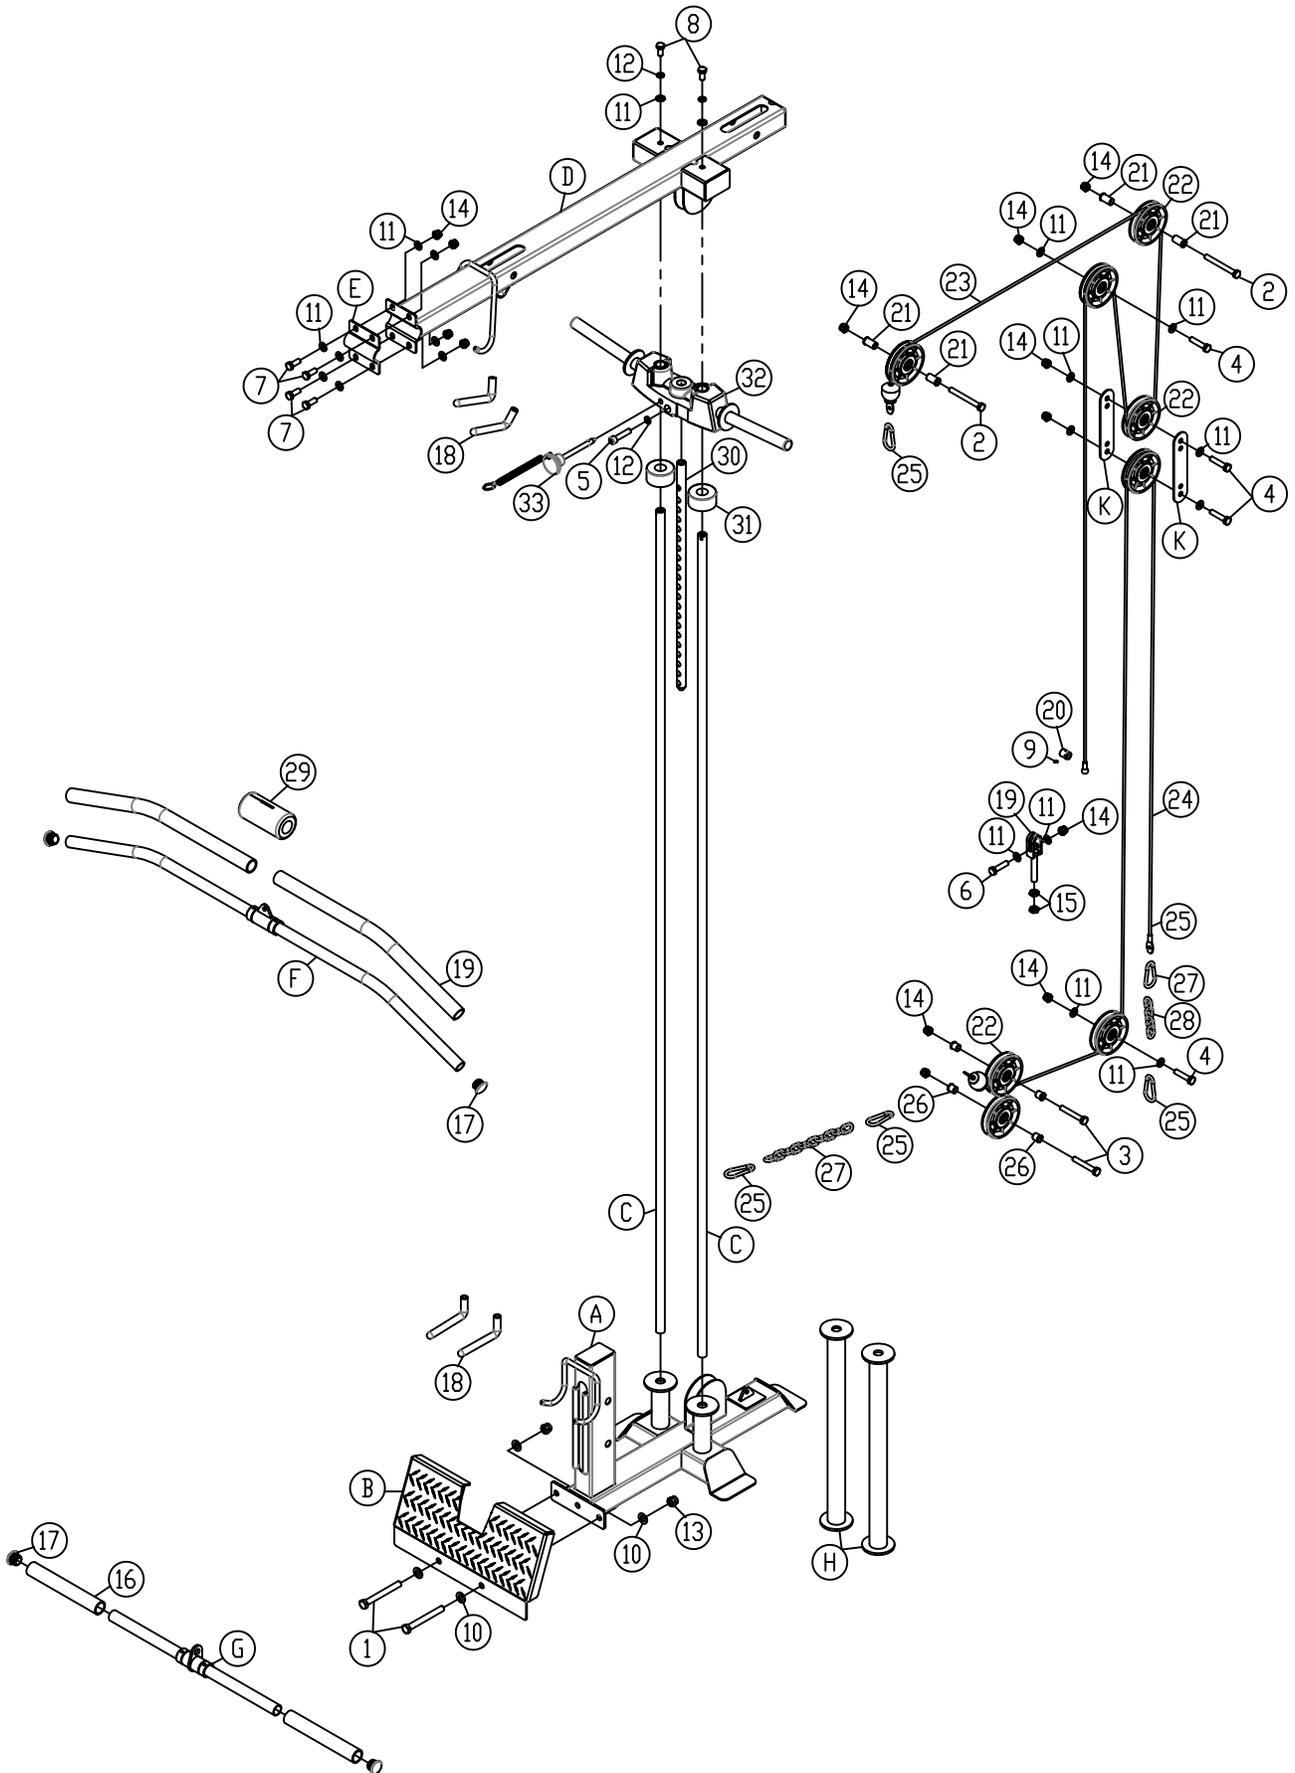



# SPRH LA

PLEASE WRITE YOUR SERIAL NUMBER IN THE BOXES BELOW

S/N # 016224-□□-□□-□□□□-□□□□

1900 S. Des Plaines Ave.  
Forest Park, IL 60130  
Phone:(708)427-3555  
Fax:(708)427-3556  
Hours: M-F 8:30 - 5:00 CST

*www.bodysolid.com*